




Low-Flow Versus 3-Volume Purge

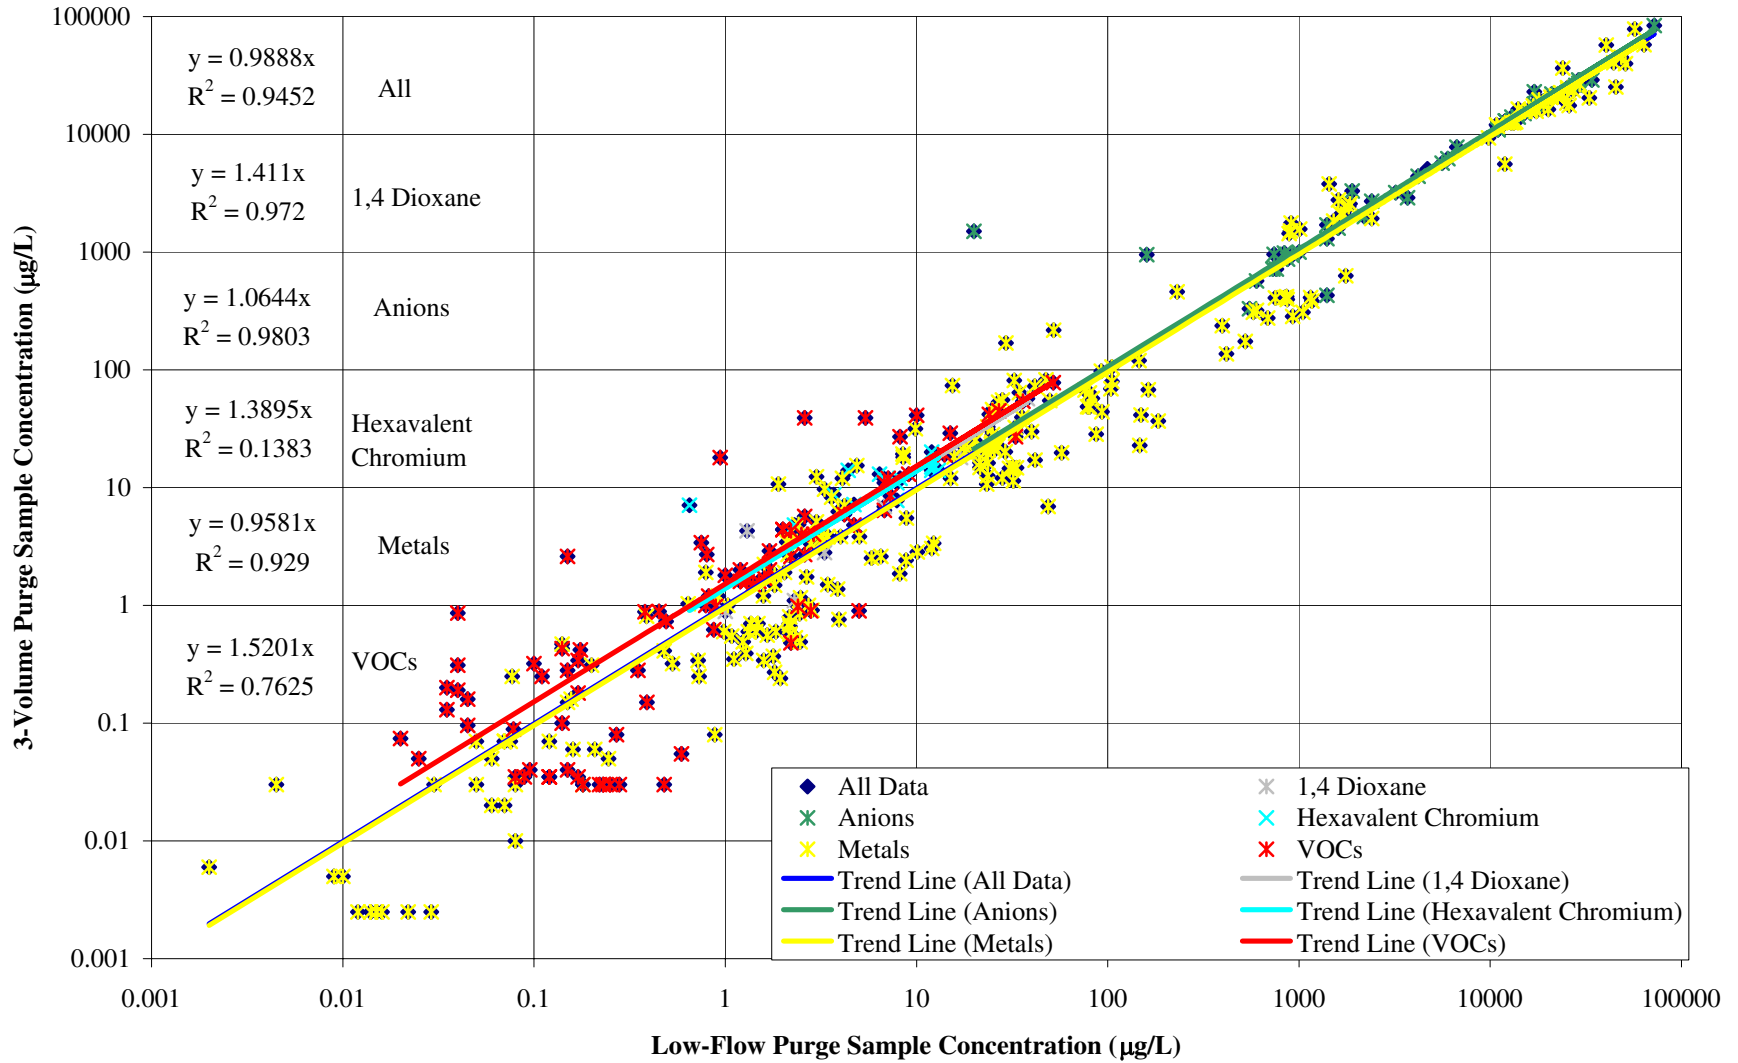


Low-Flow Versus Hydrasleeve

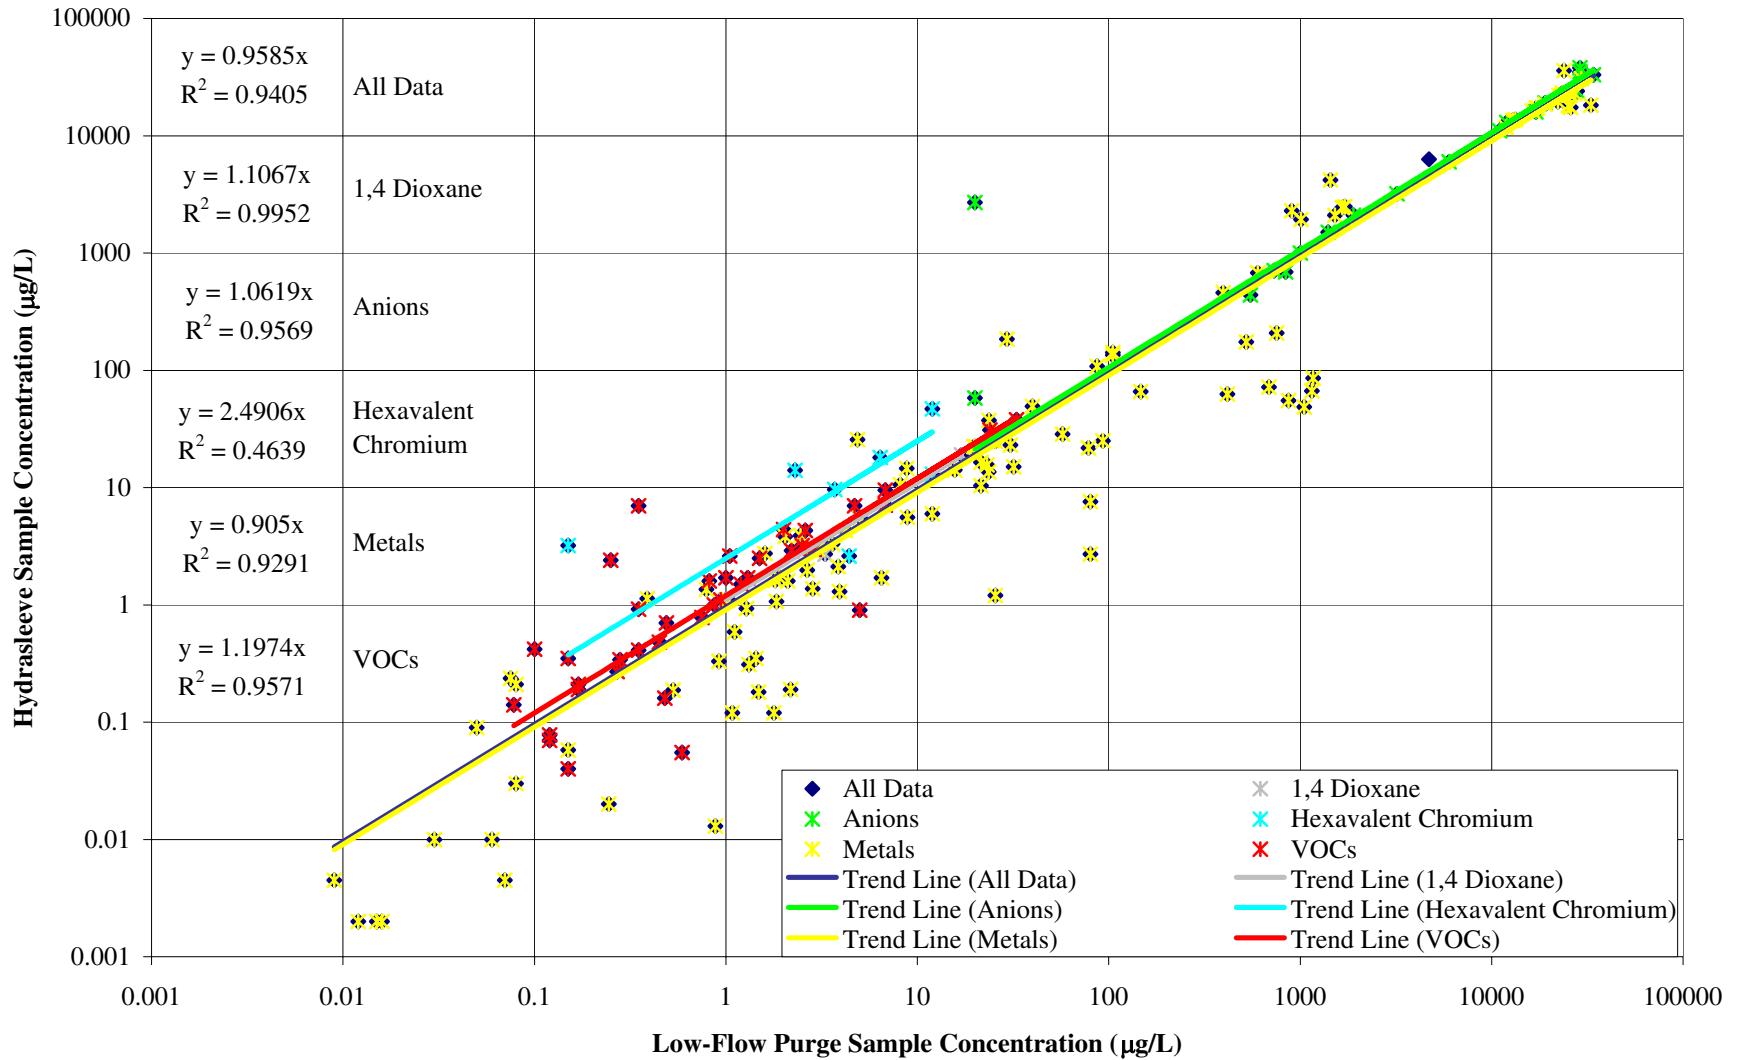


Low-Flow Versus PDBS

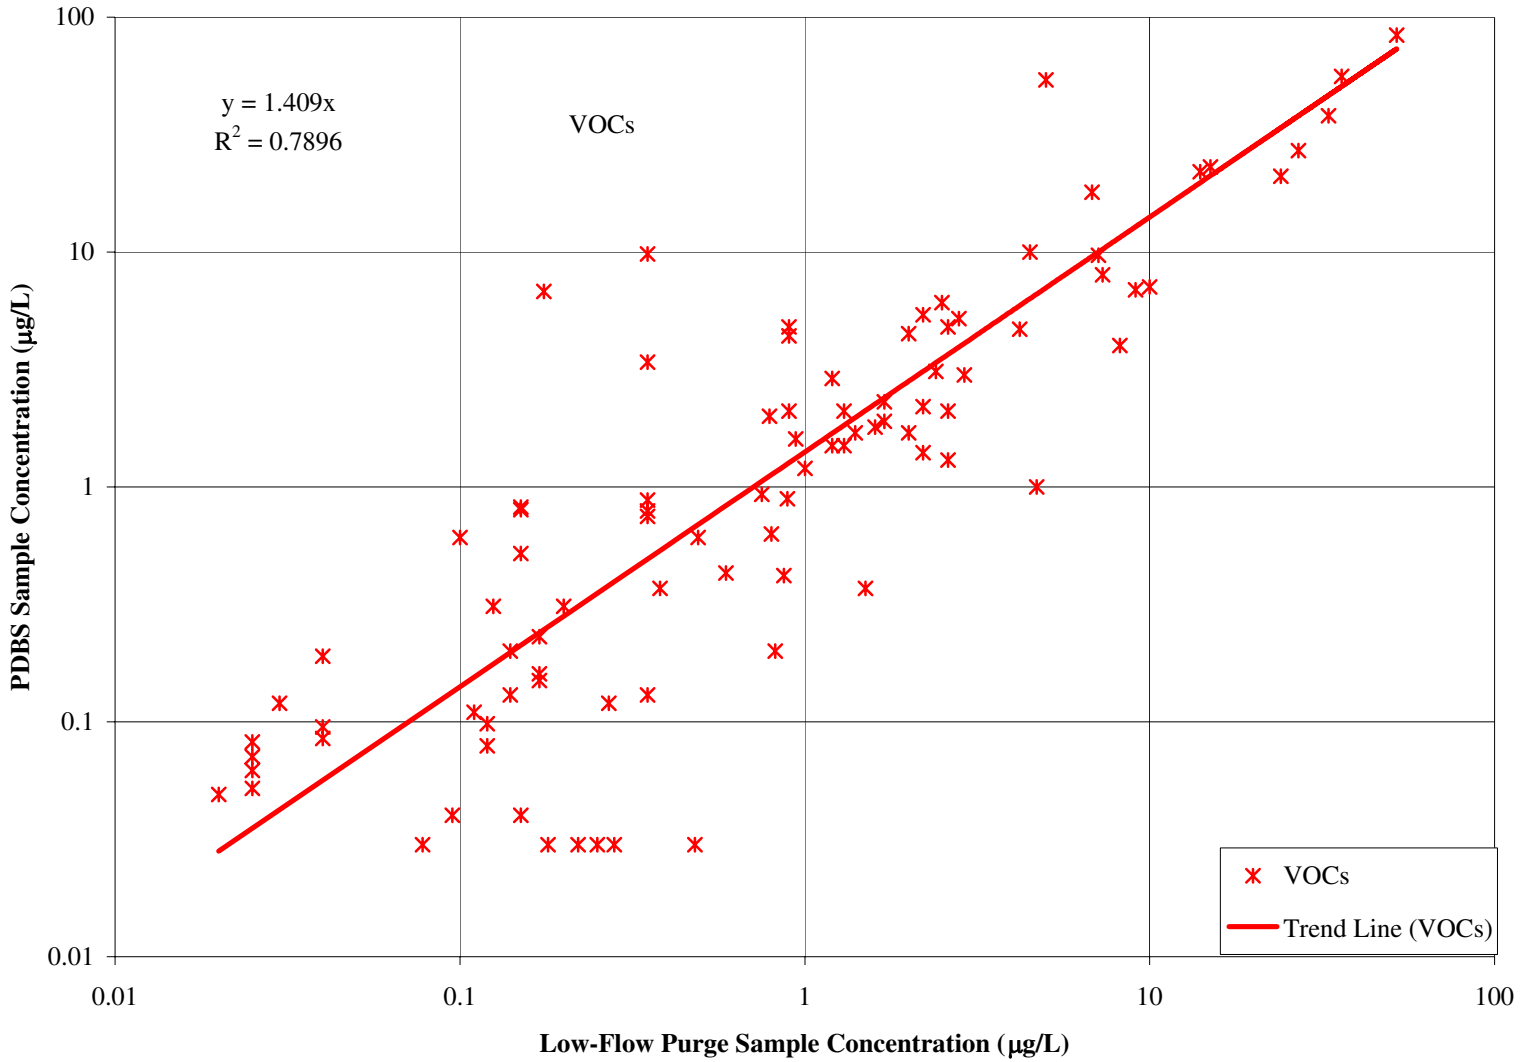


Low-Flow Versus PSMS

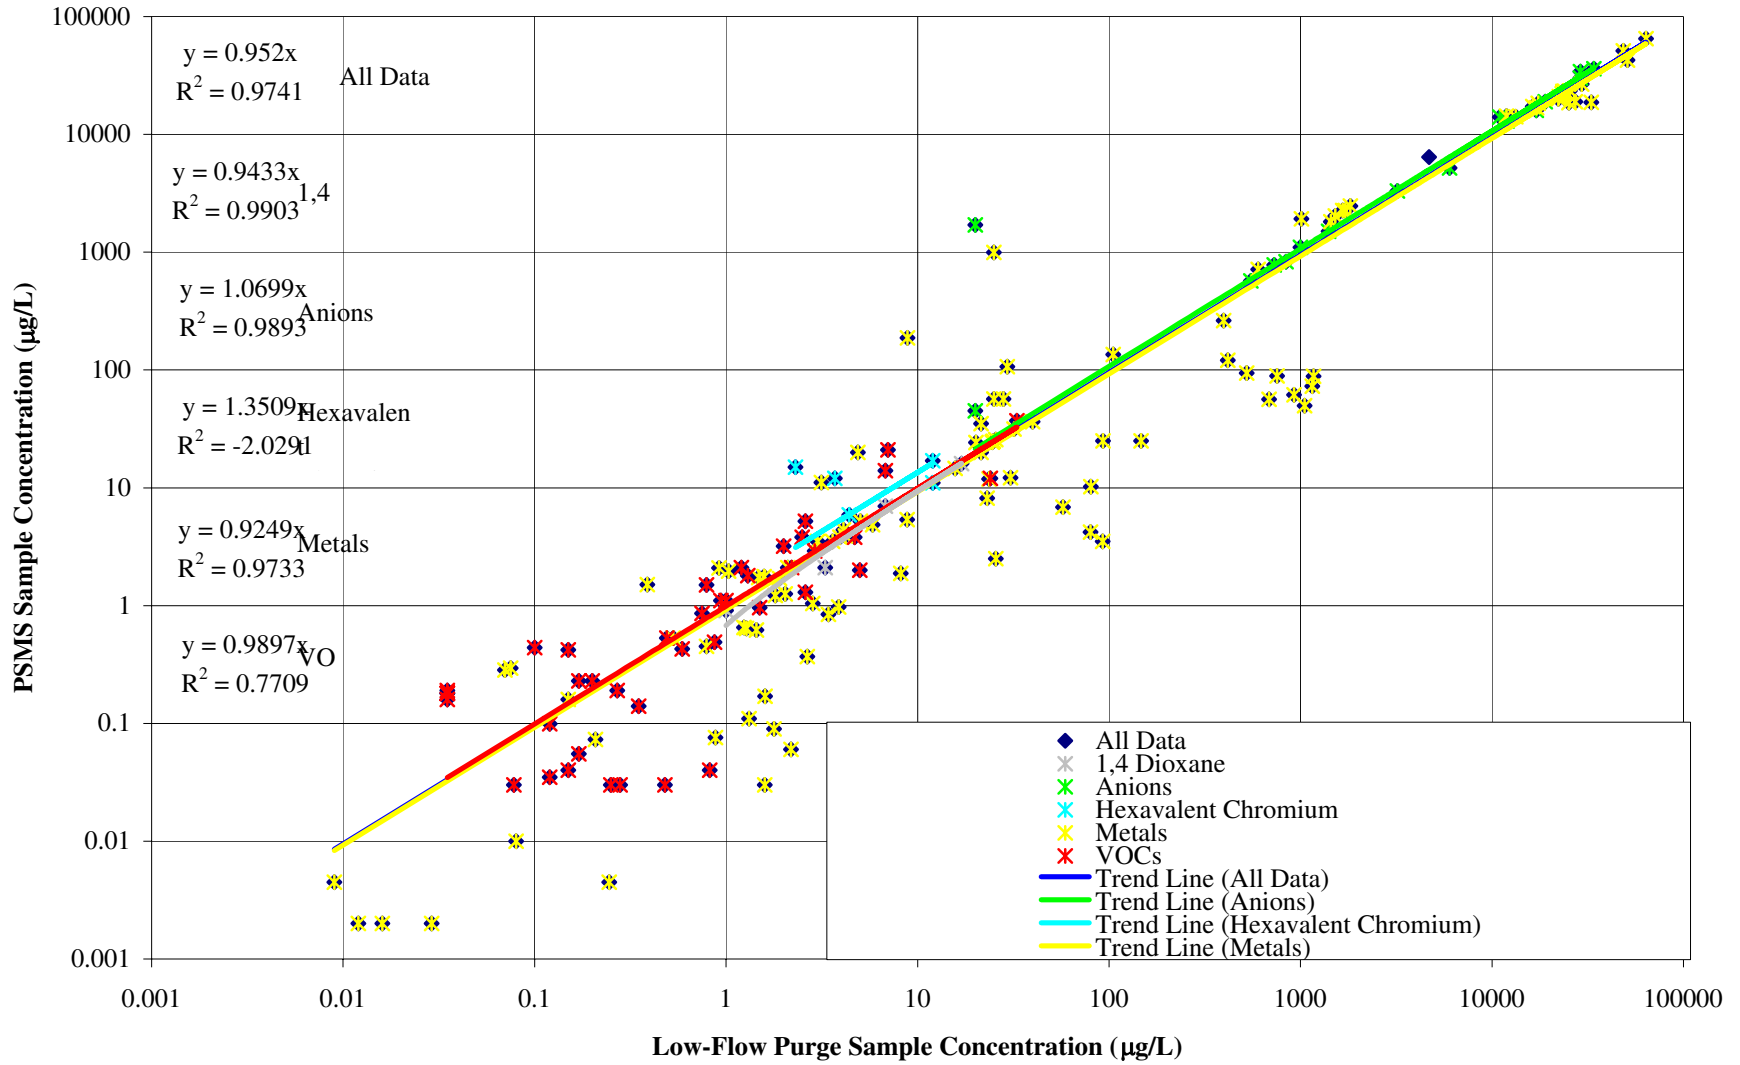


Low-Flow Versus RCS

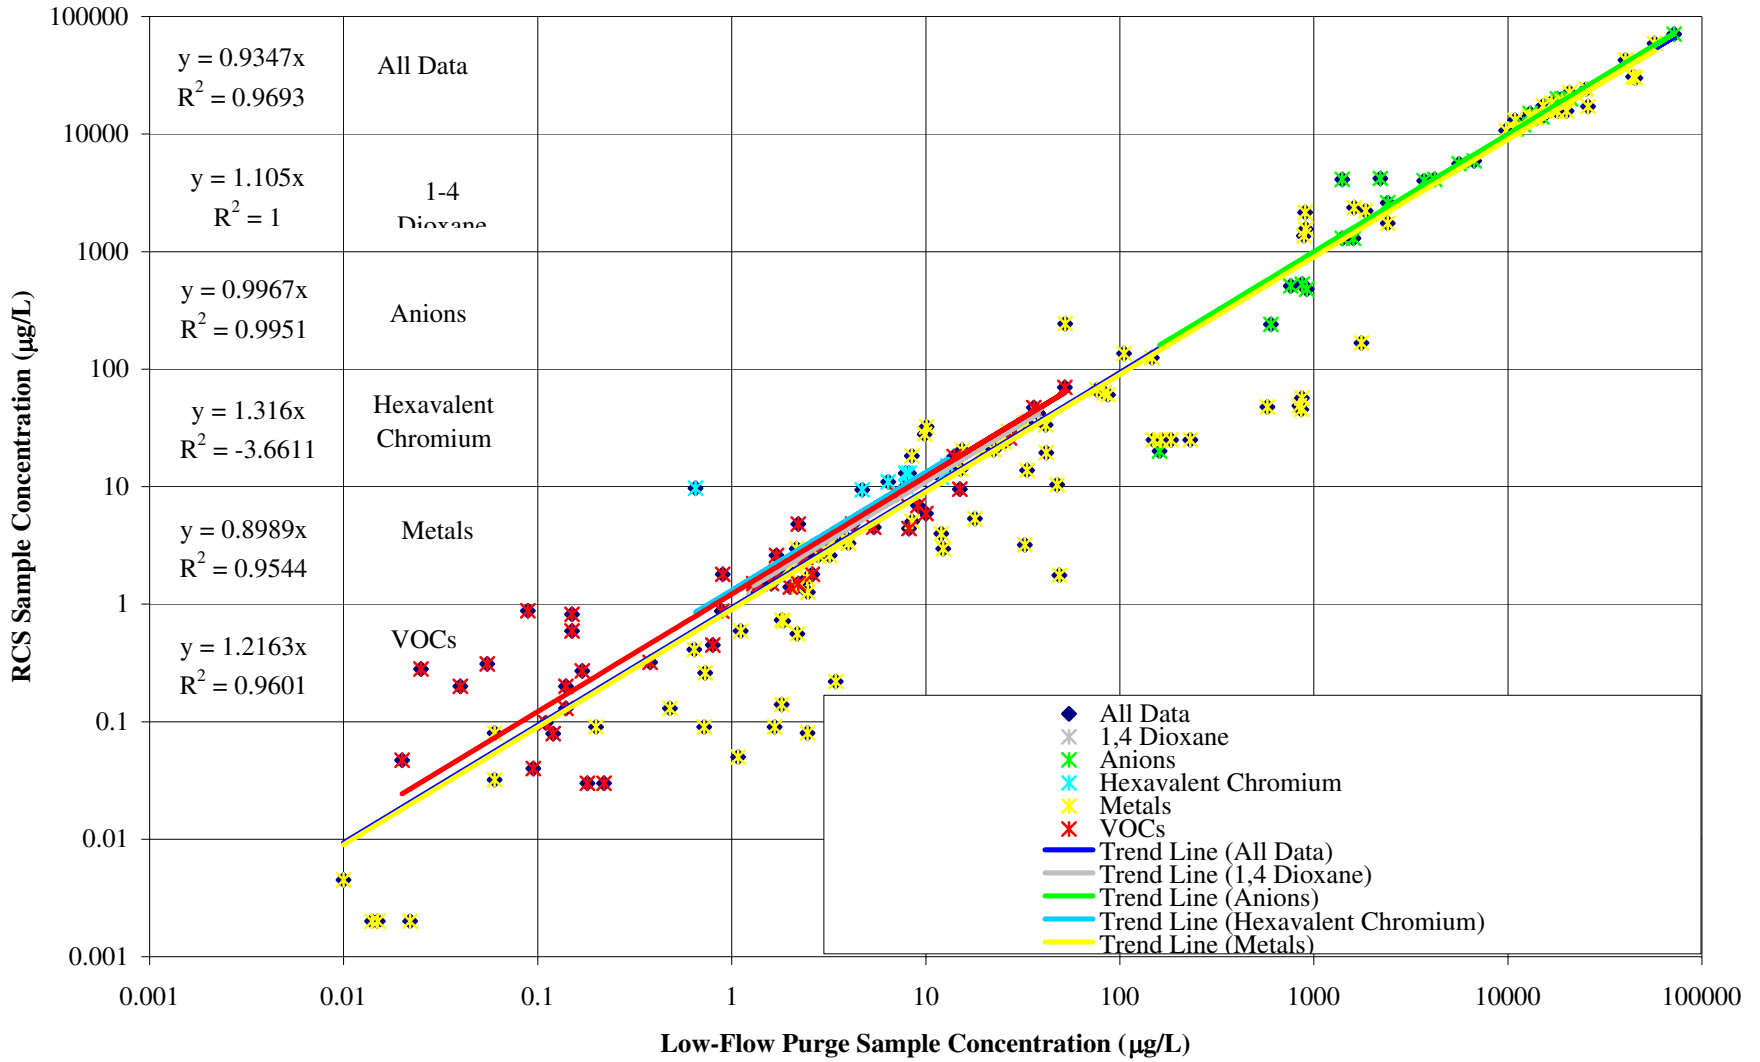


Low-Flow Versus RPPS

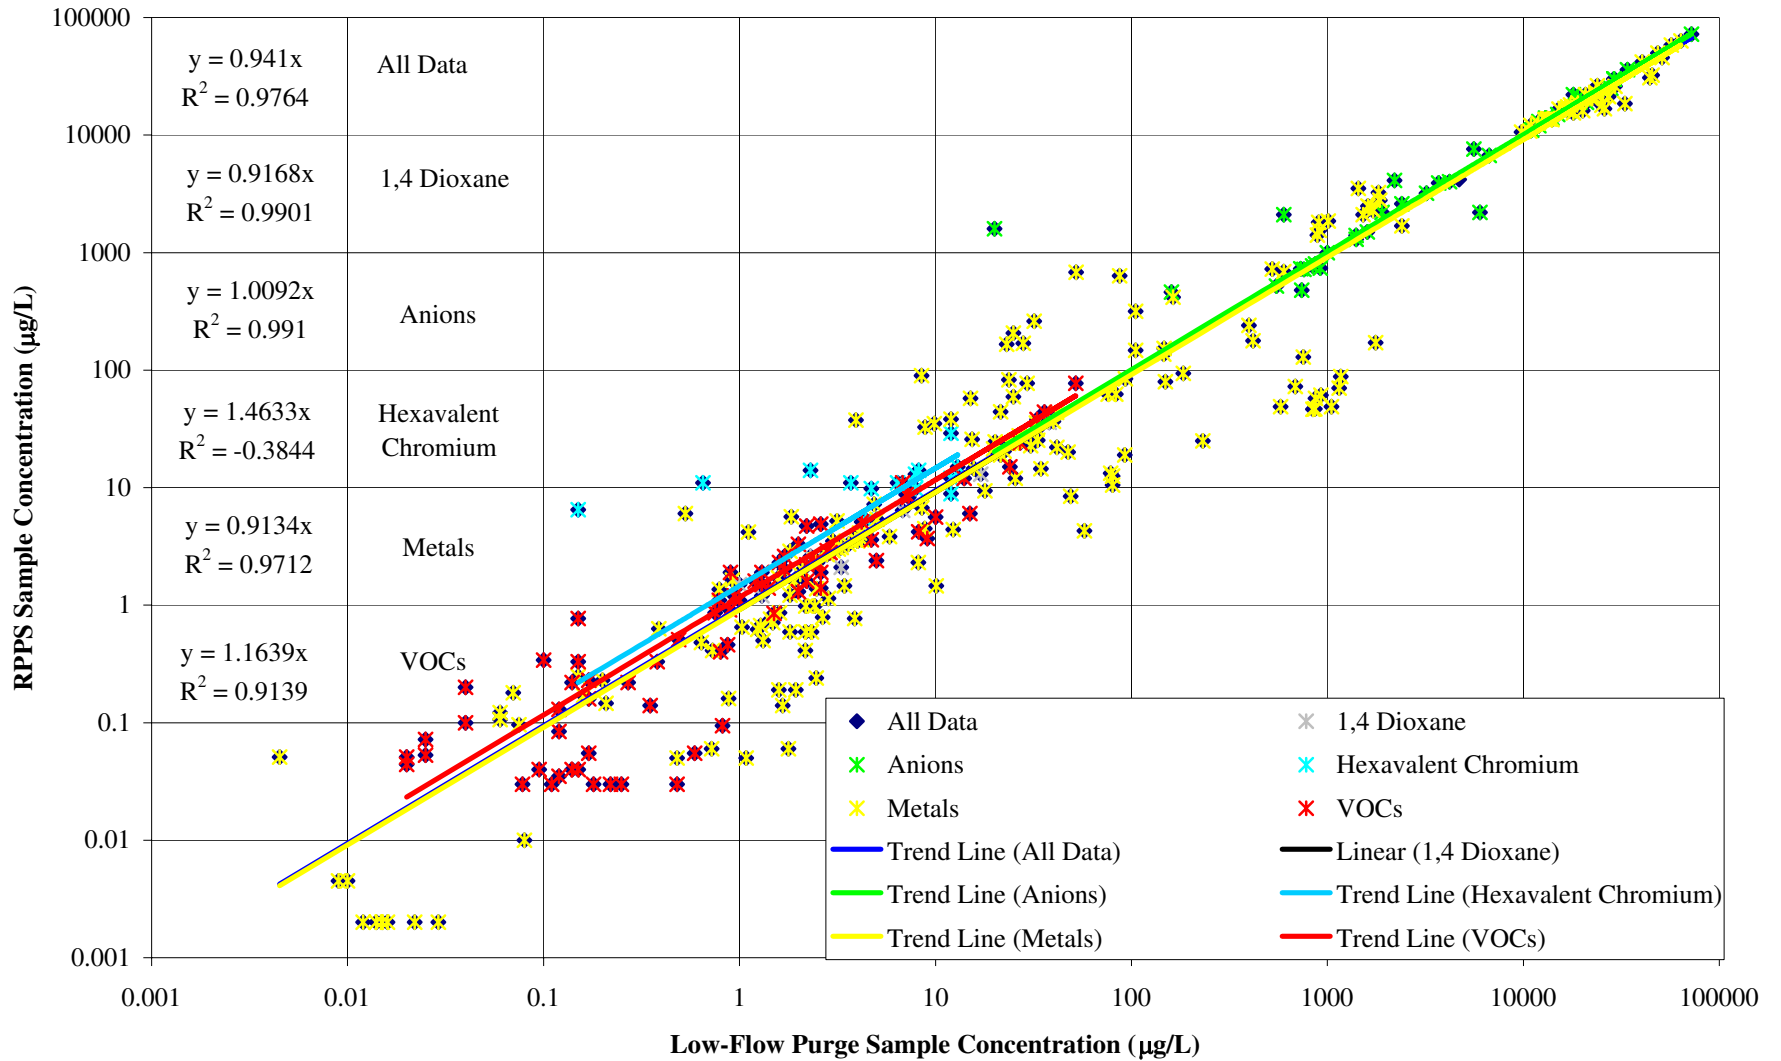


Low-Flow Versus Snap Sampler

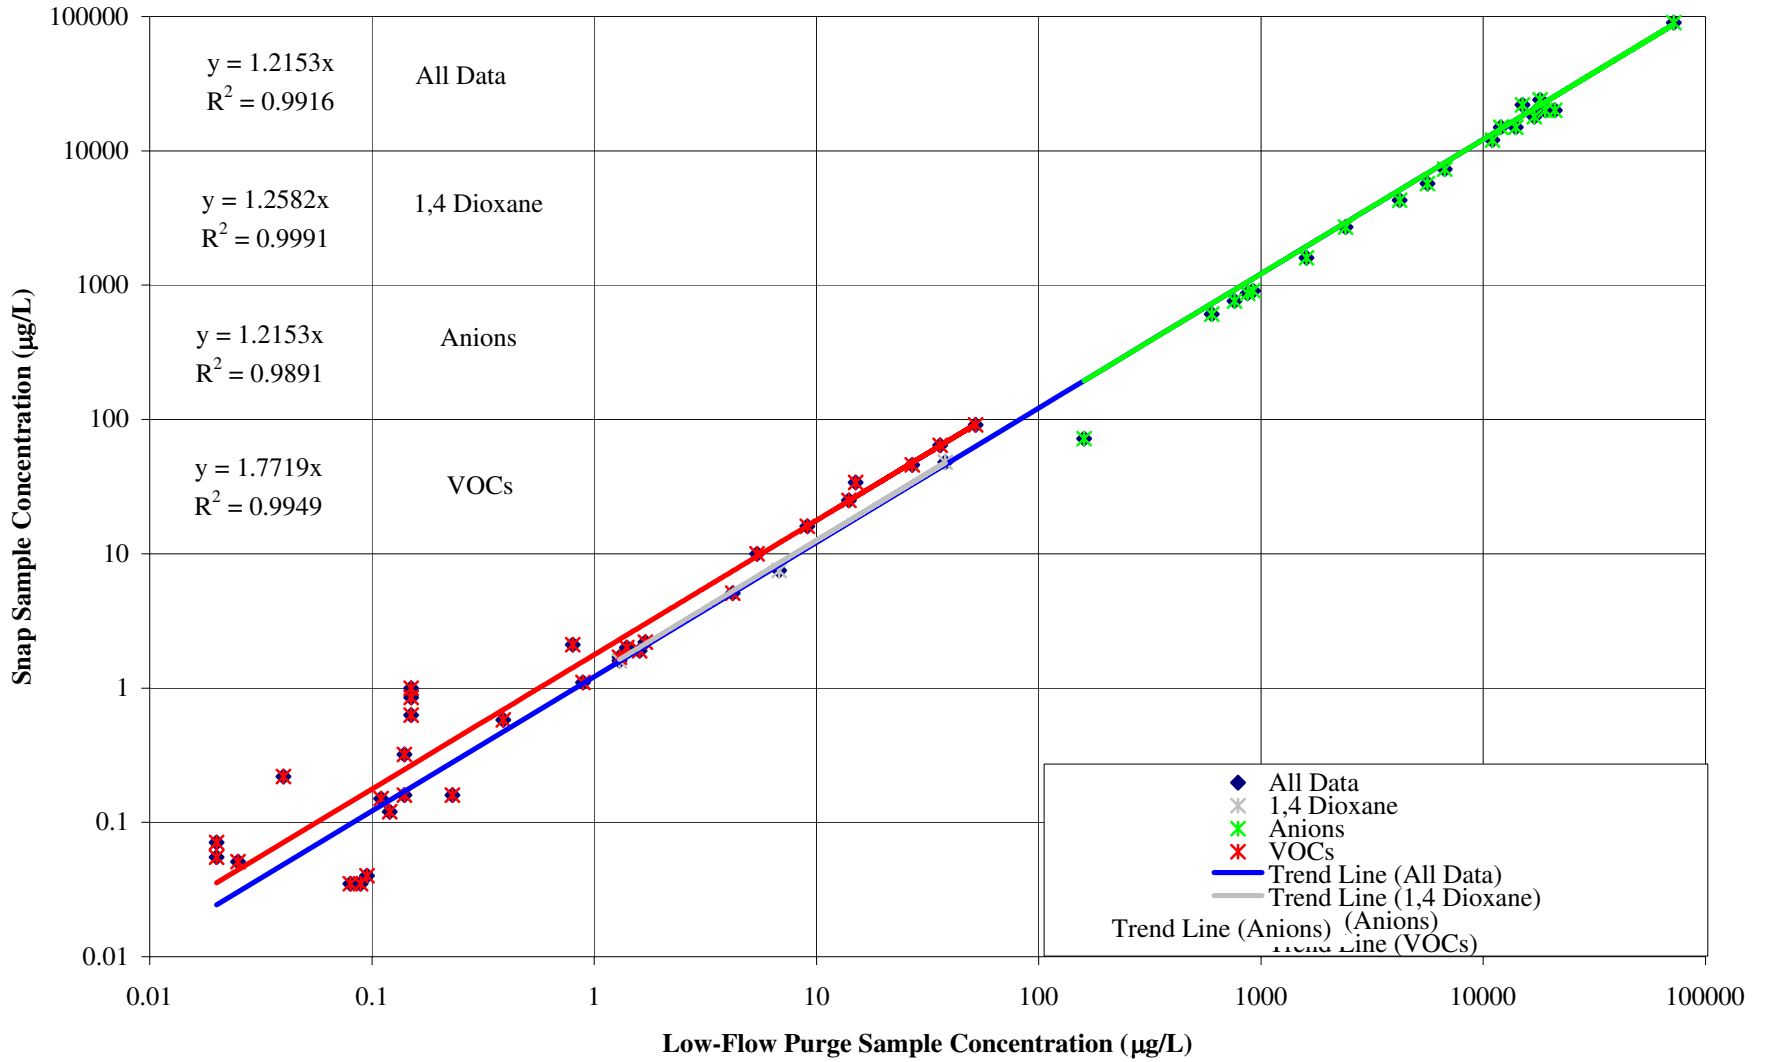


3-Volume Versus Hydrasleeve

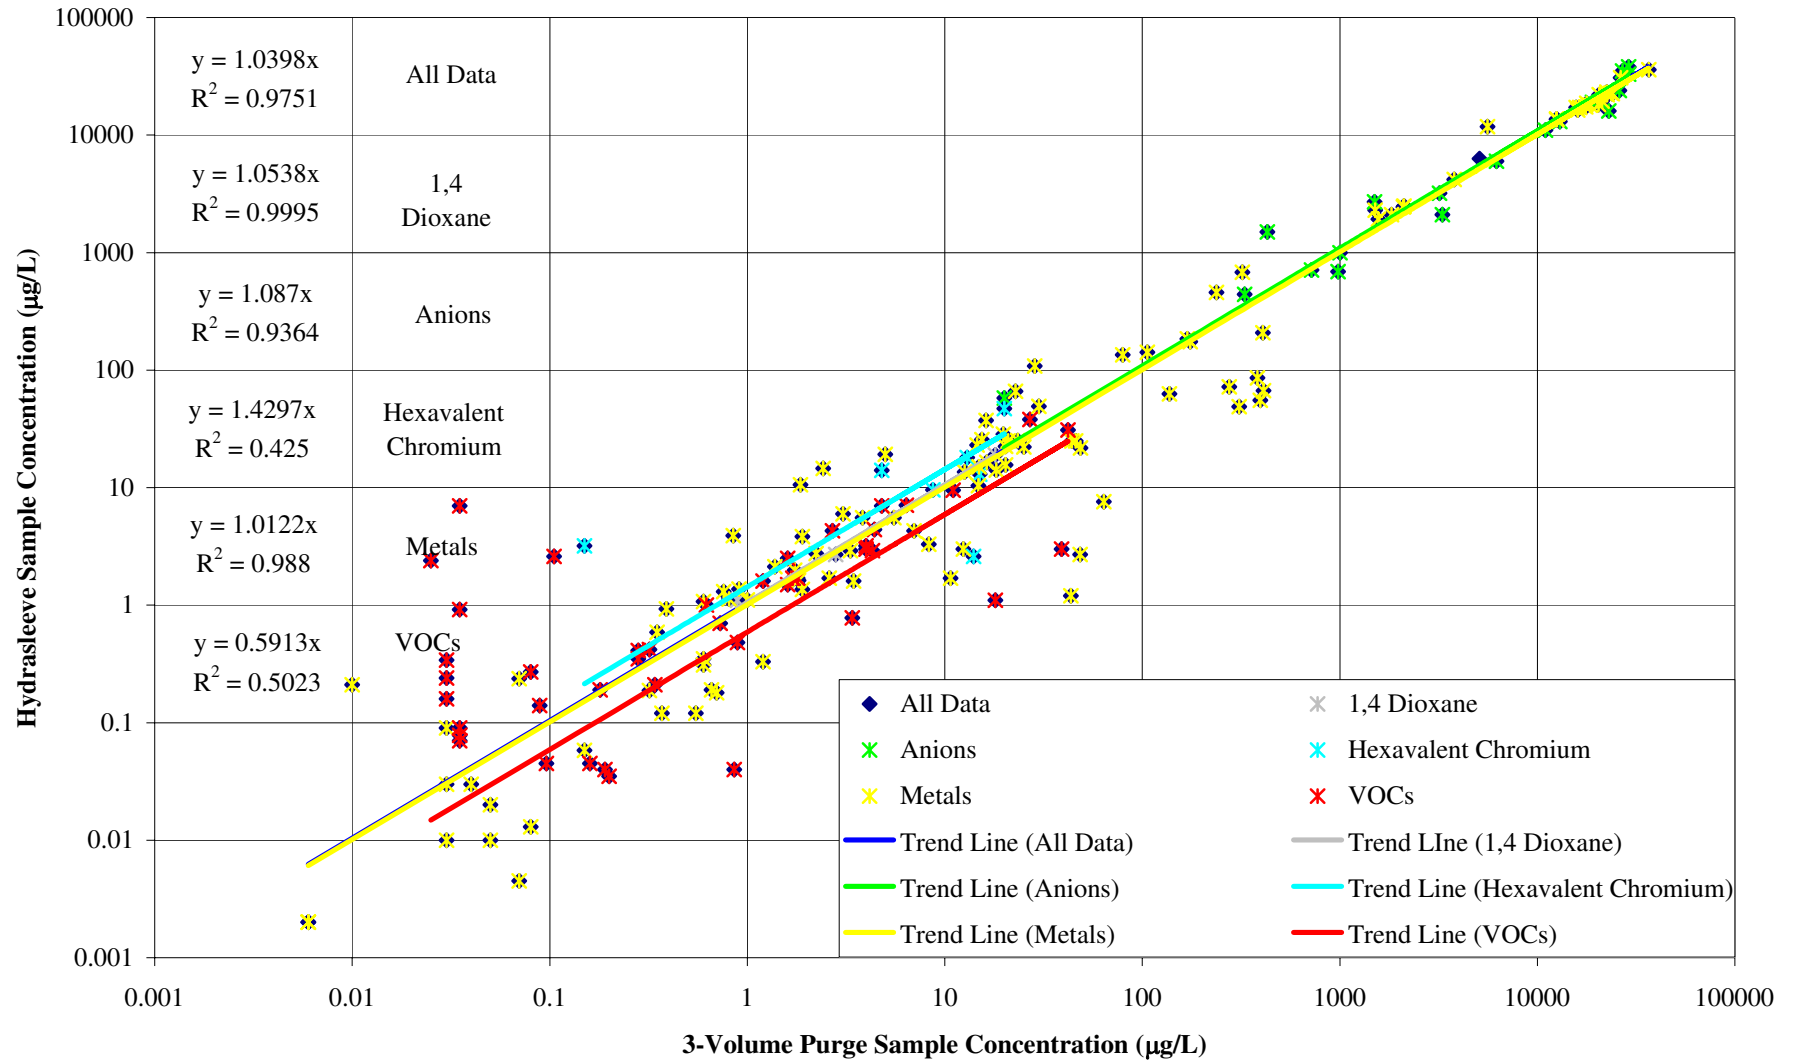


3-Volume Versus PDBS

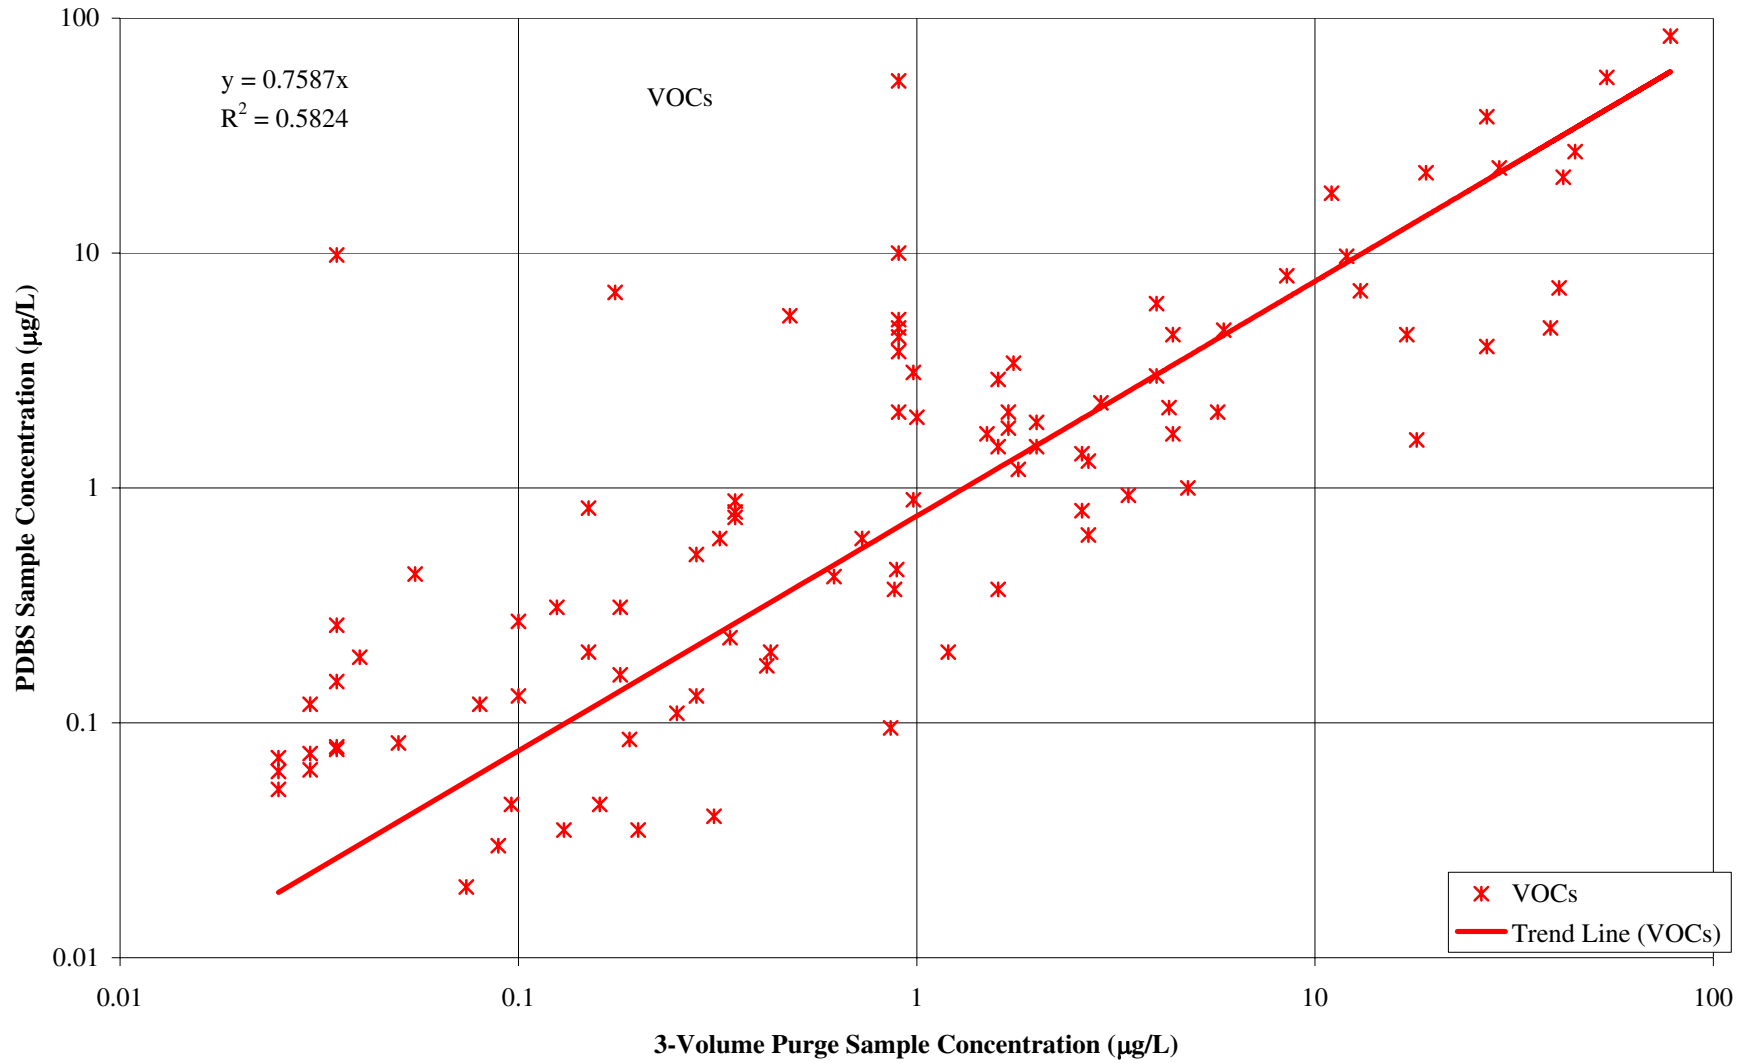


3-Volume Versus PSMS

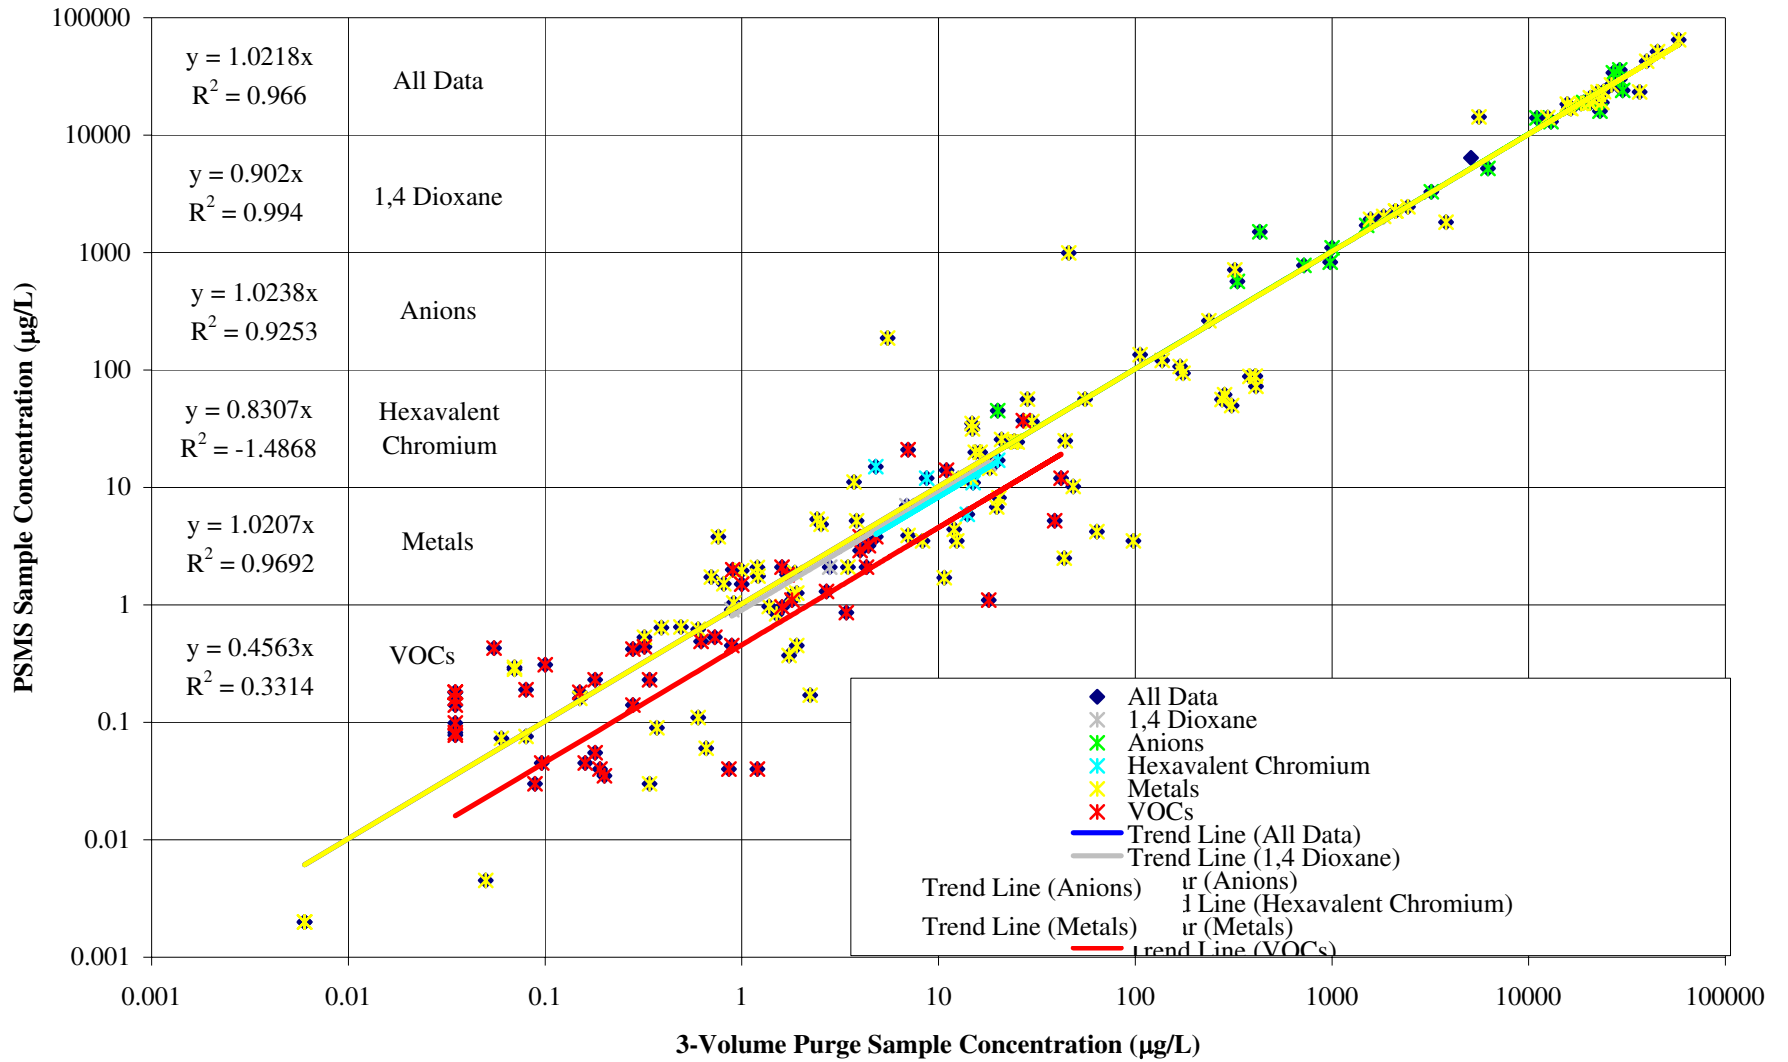


3-Volume Versus RCS

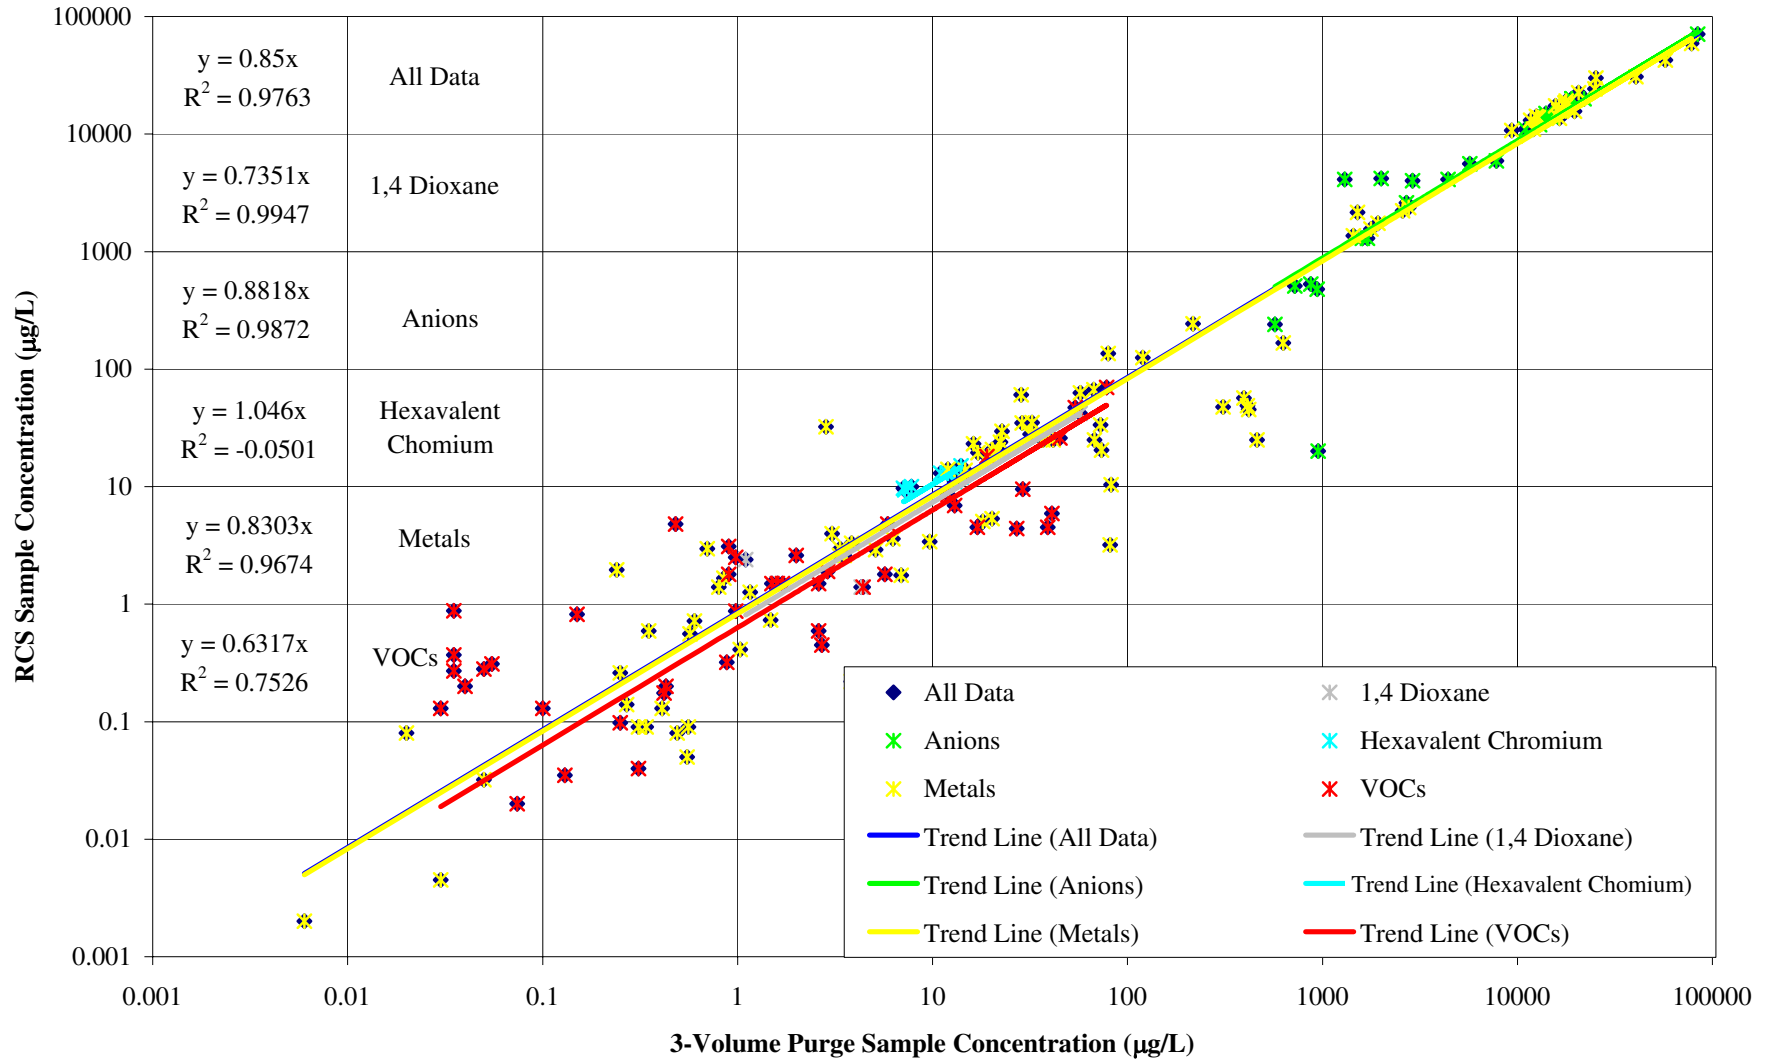


3-Volume Versus RPPS

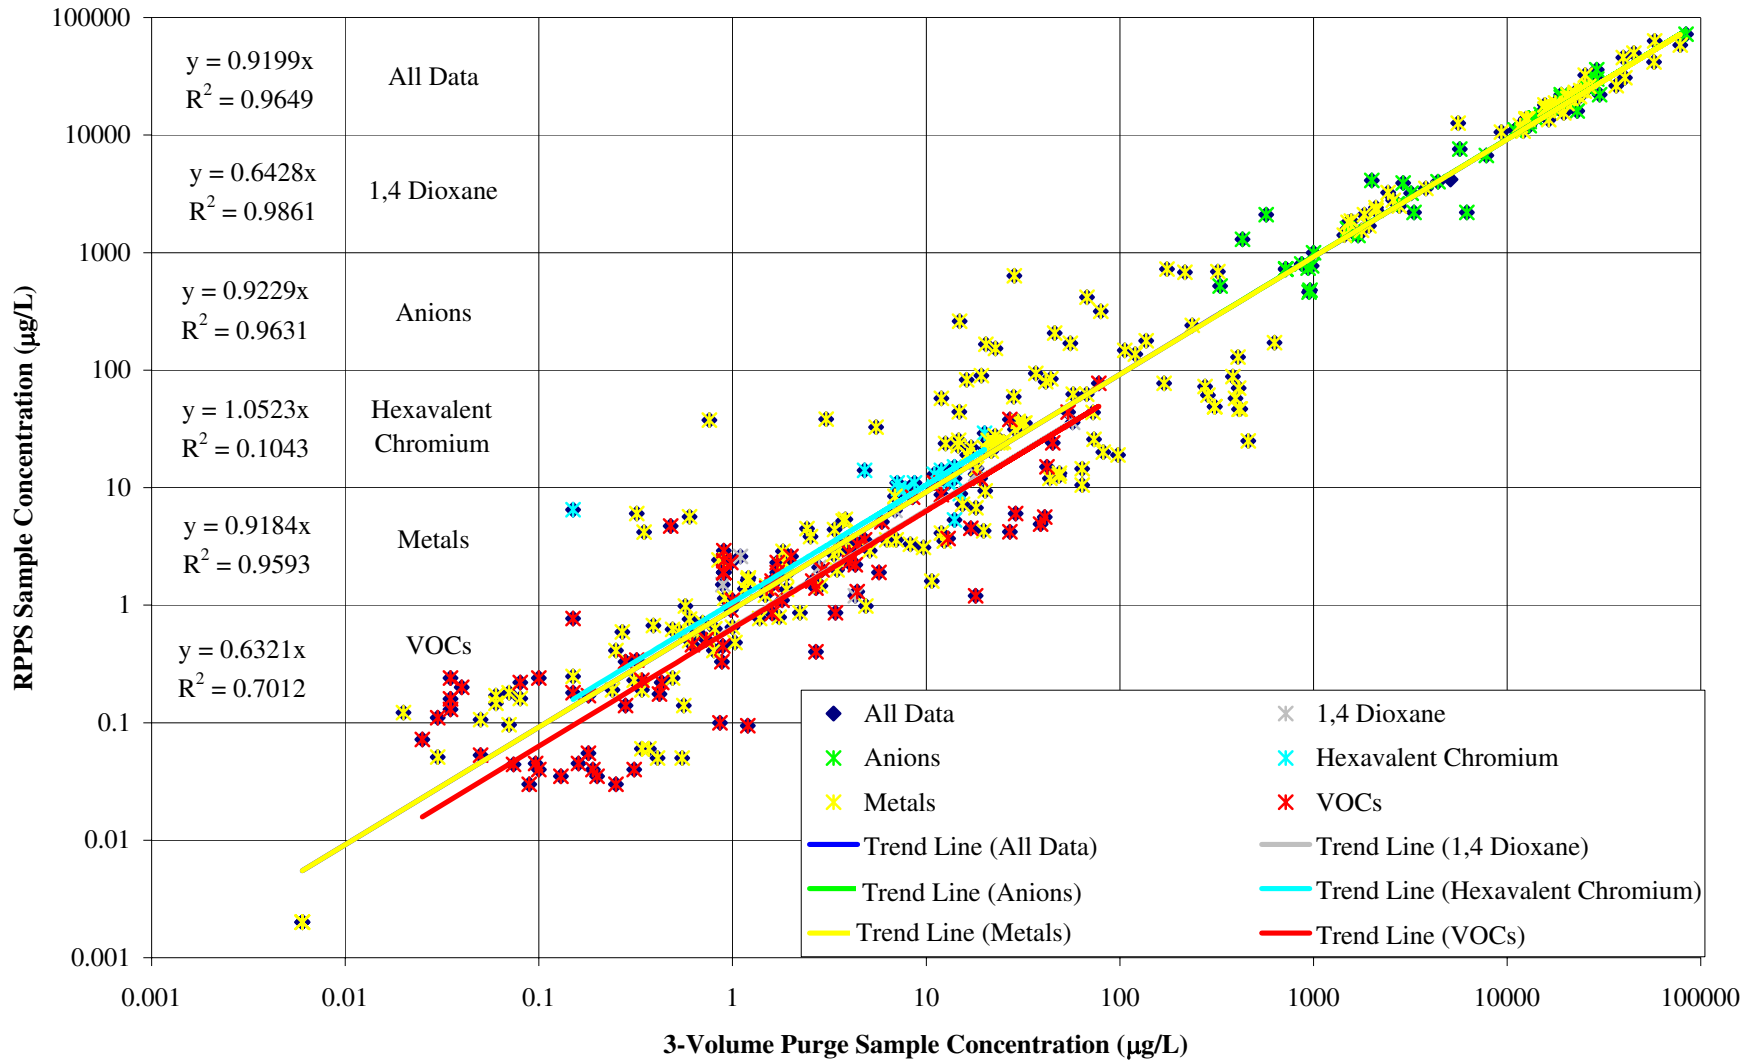


3-Volume Versus Snap Sampler

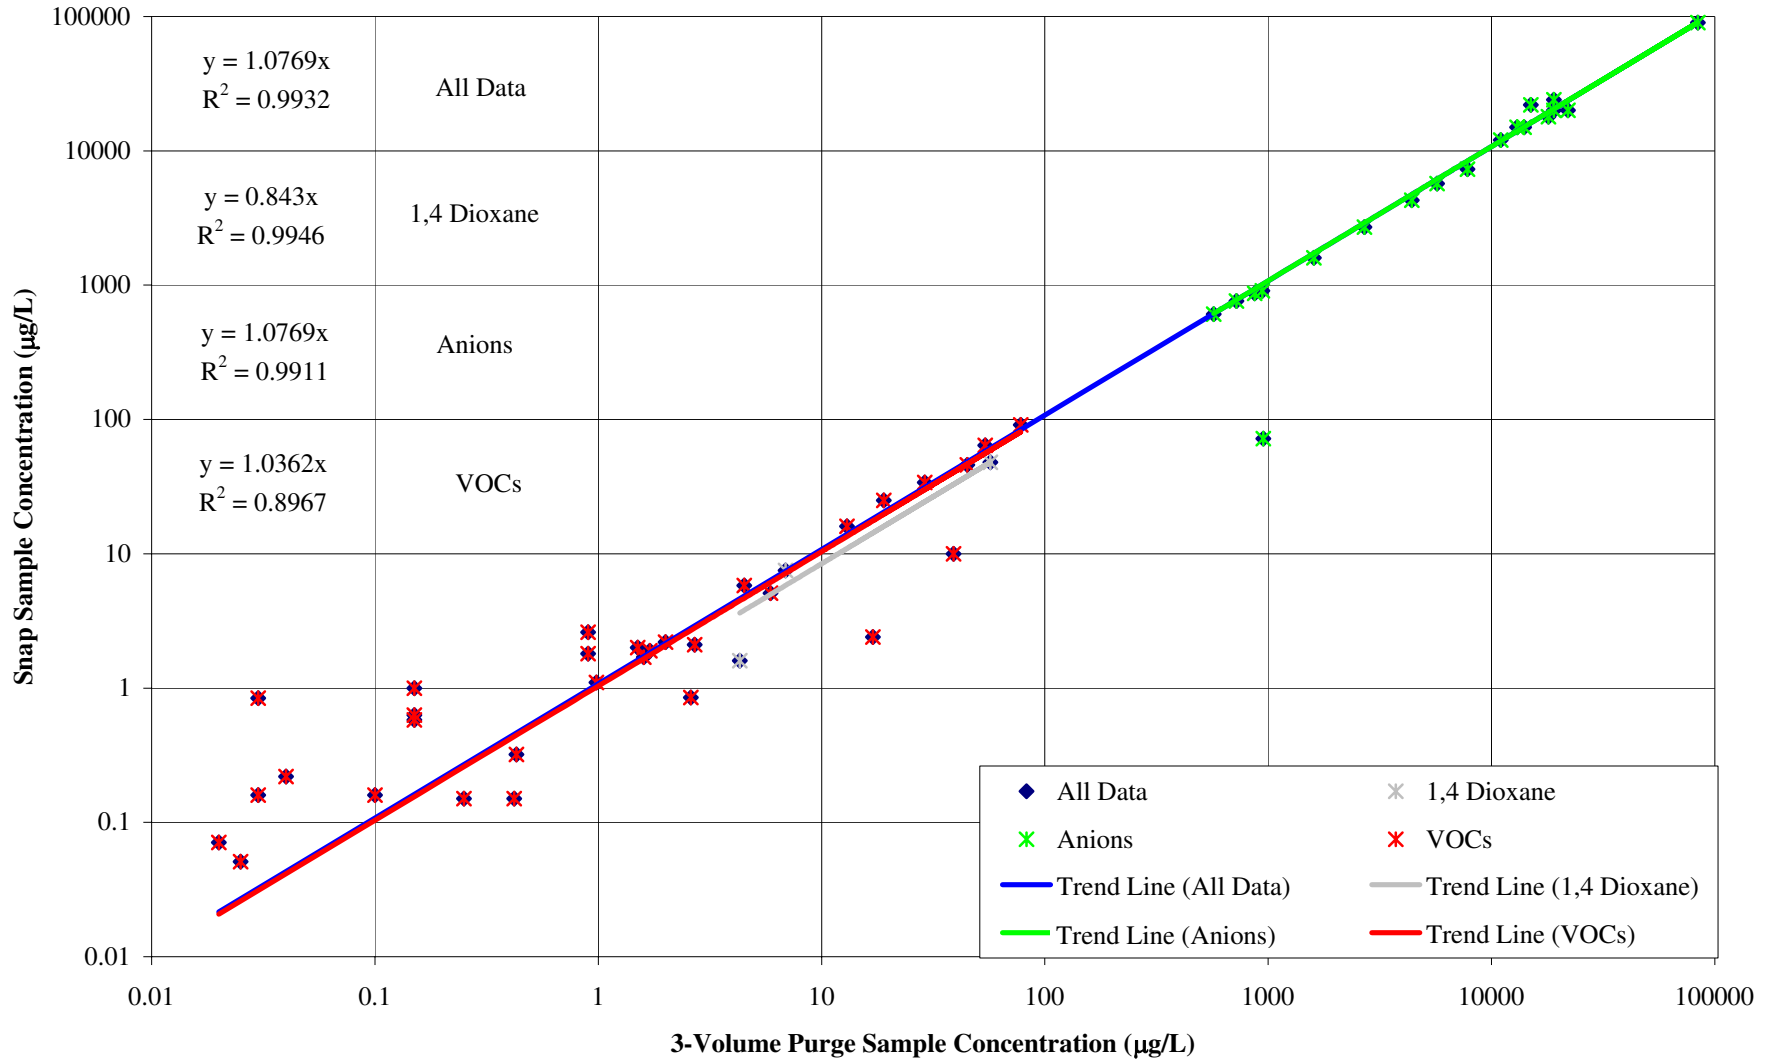


Hydrasleeve Versus PSMS

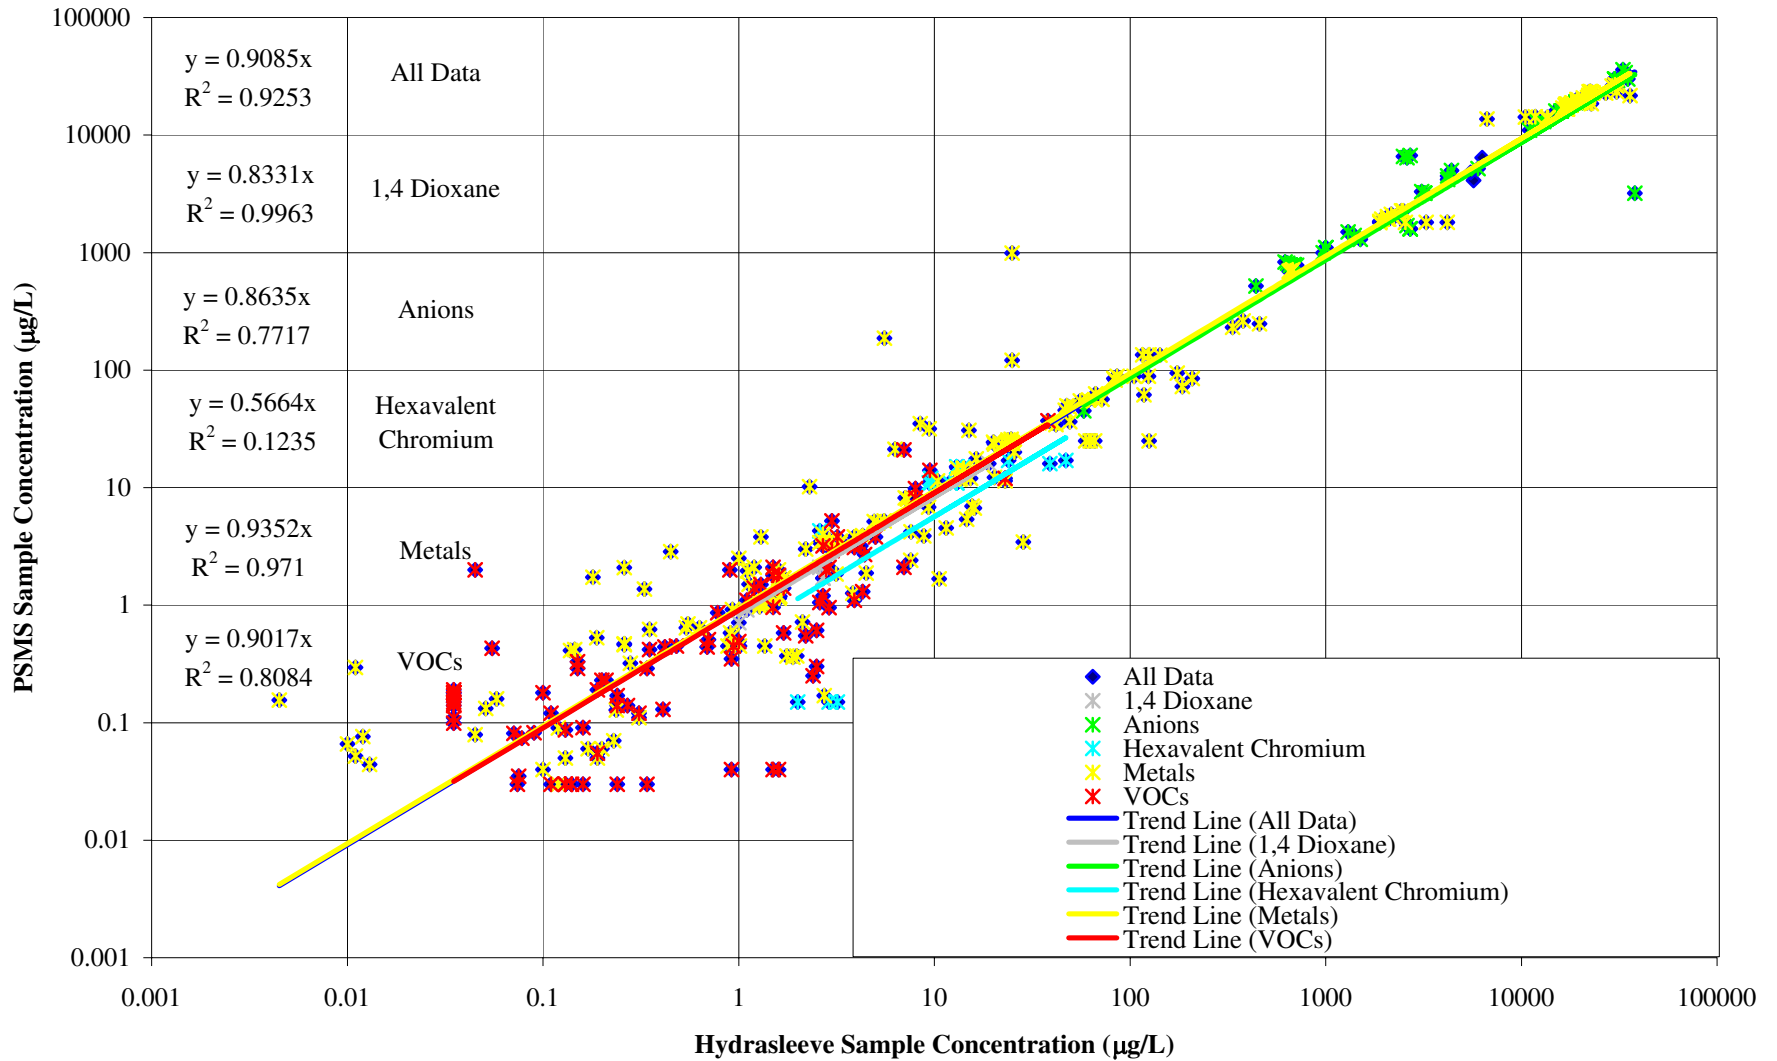


Hydrasleeve Versus RCS

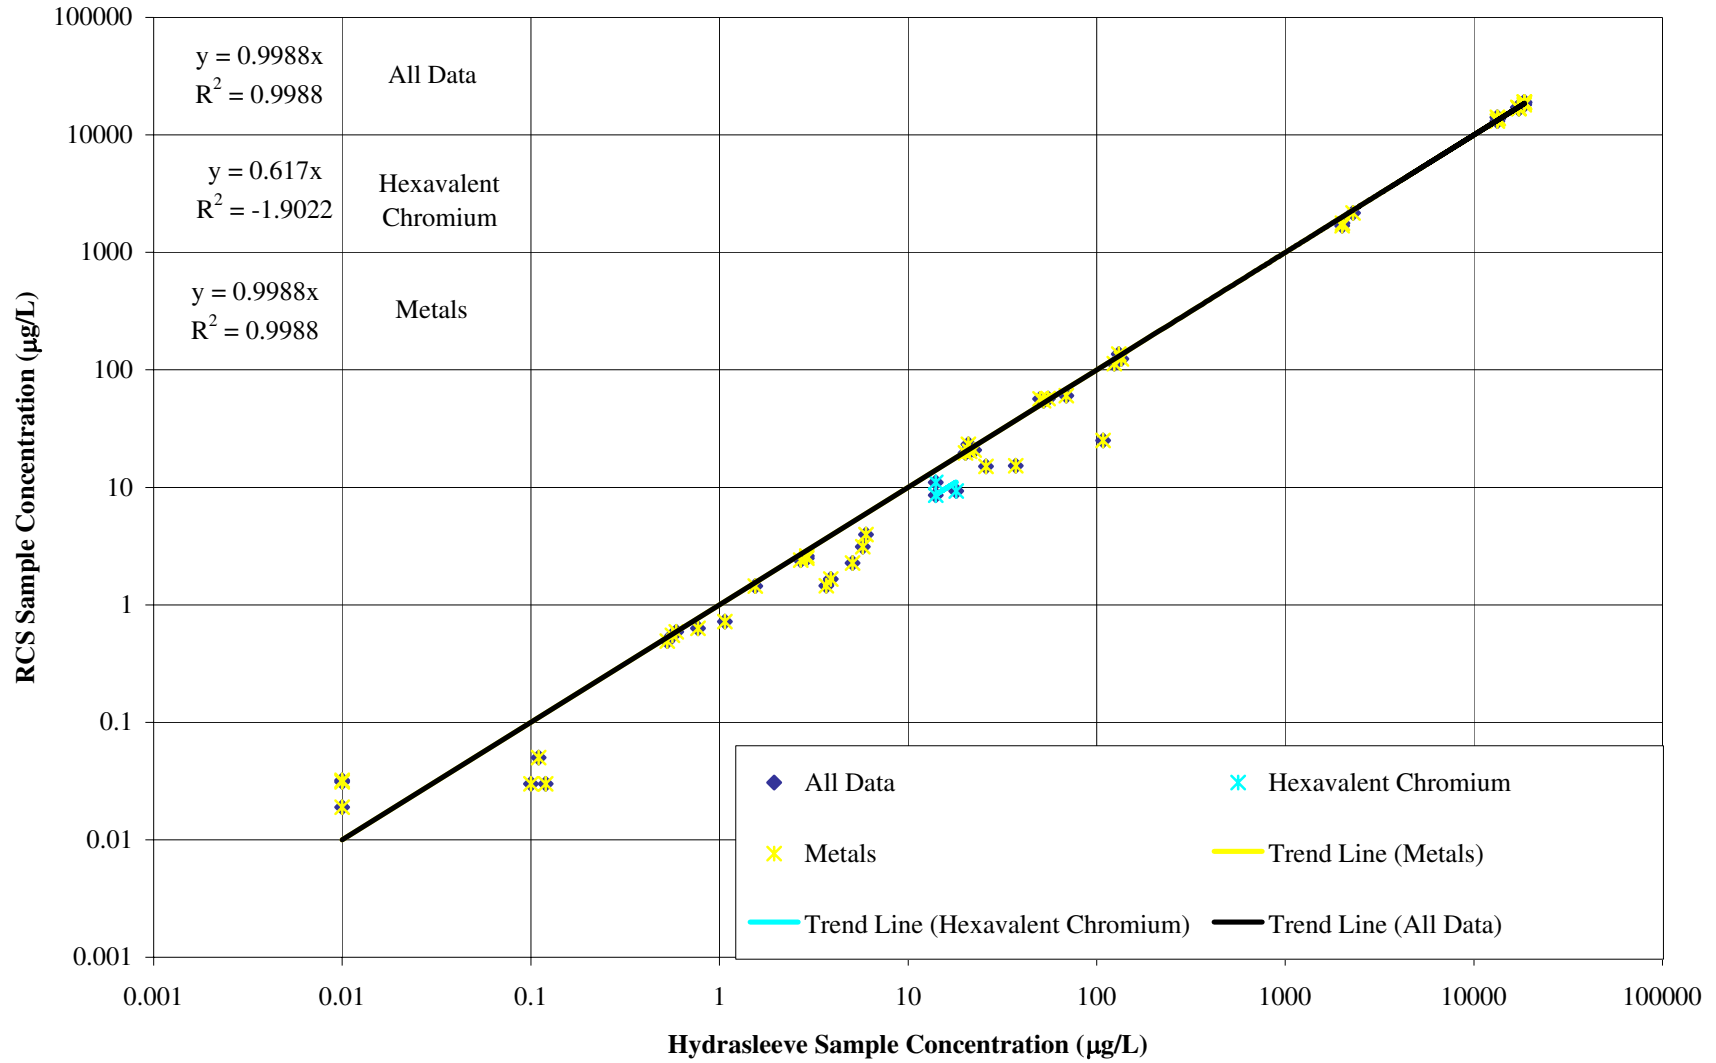


Hydrasleeve Versus RPPS

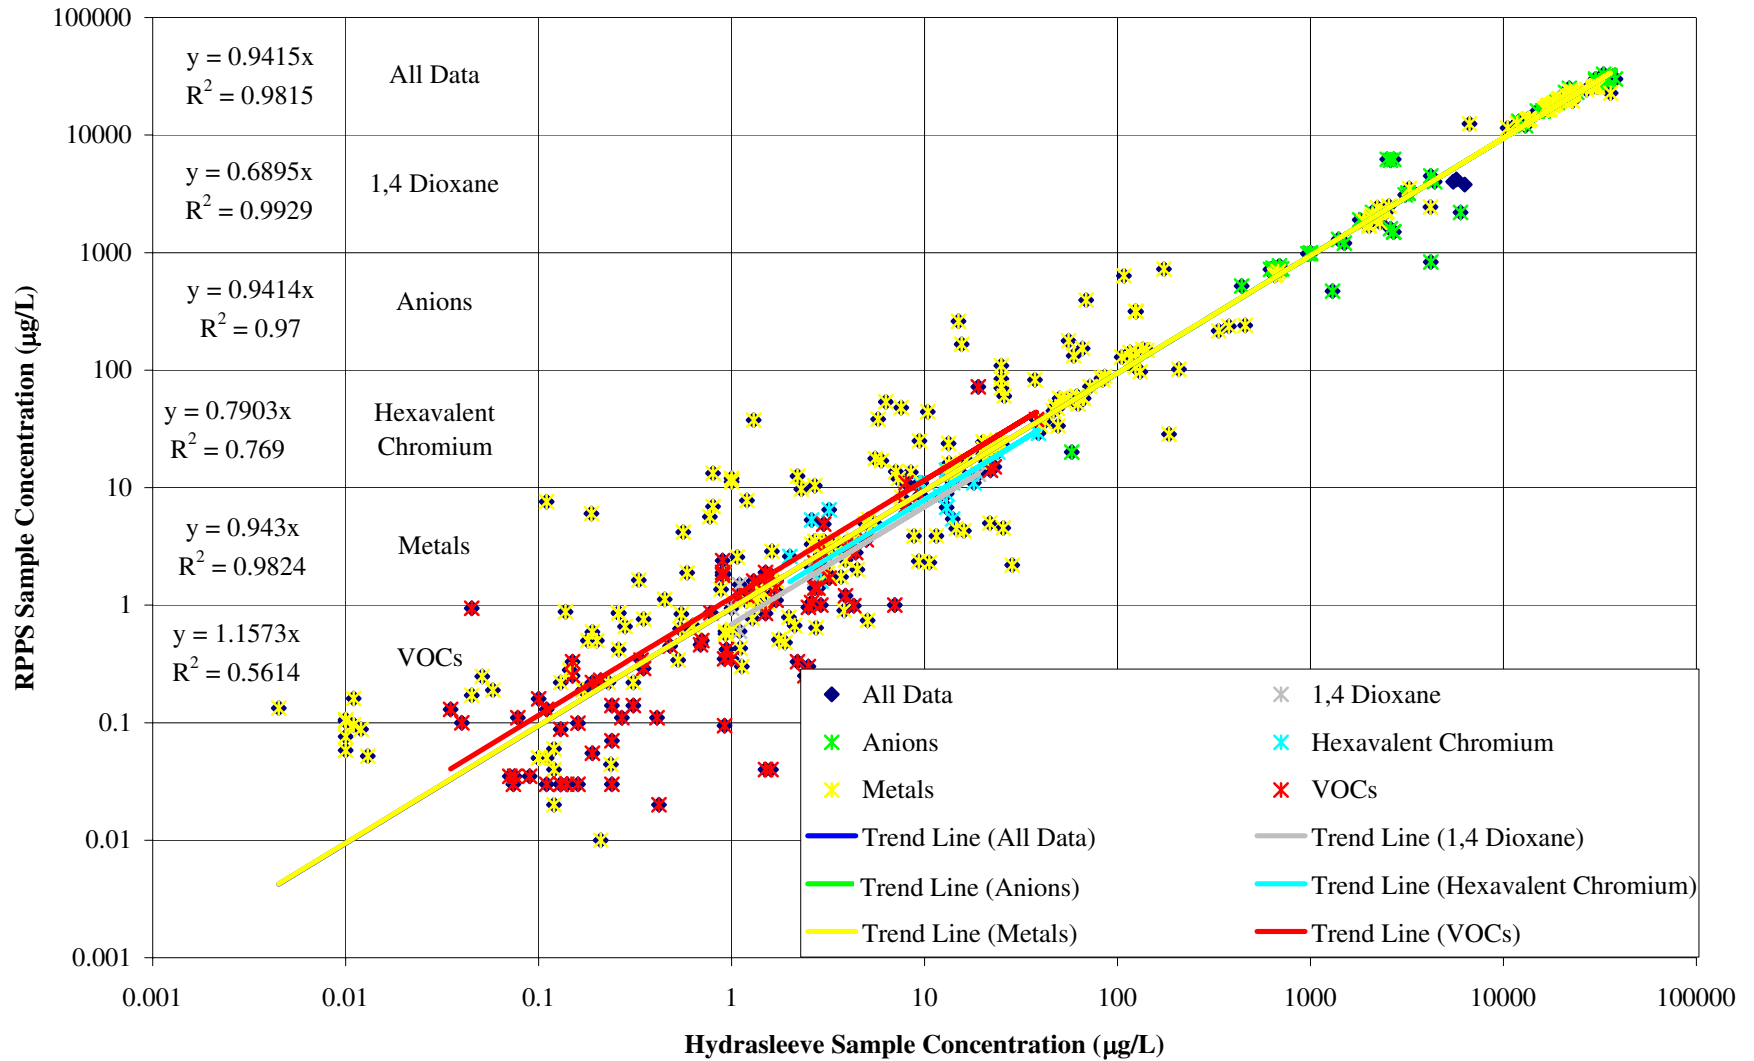


PDBS Versus PSMS

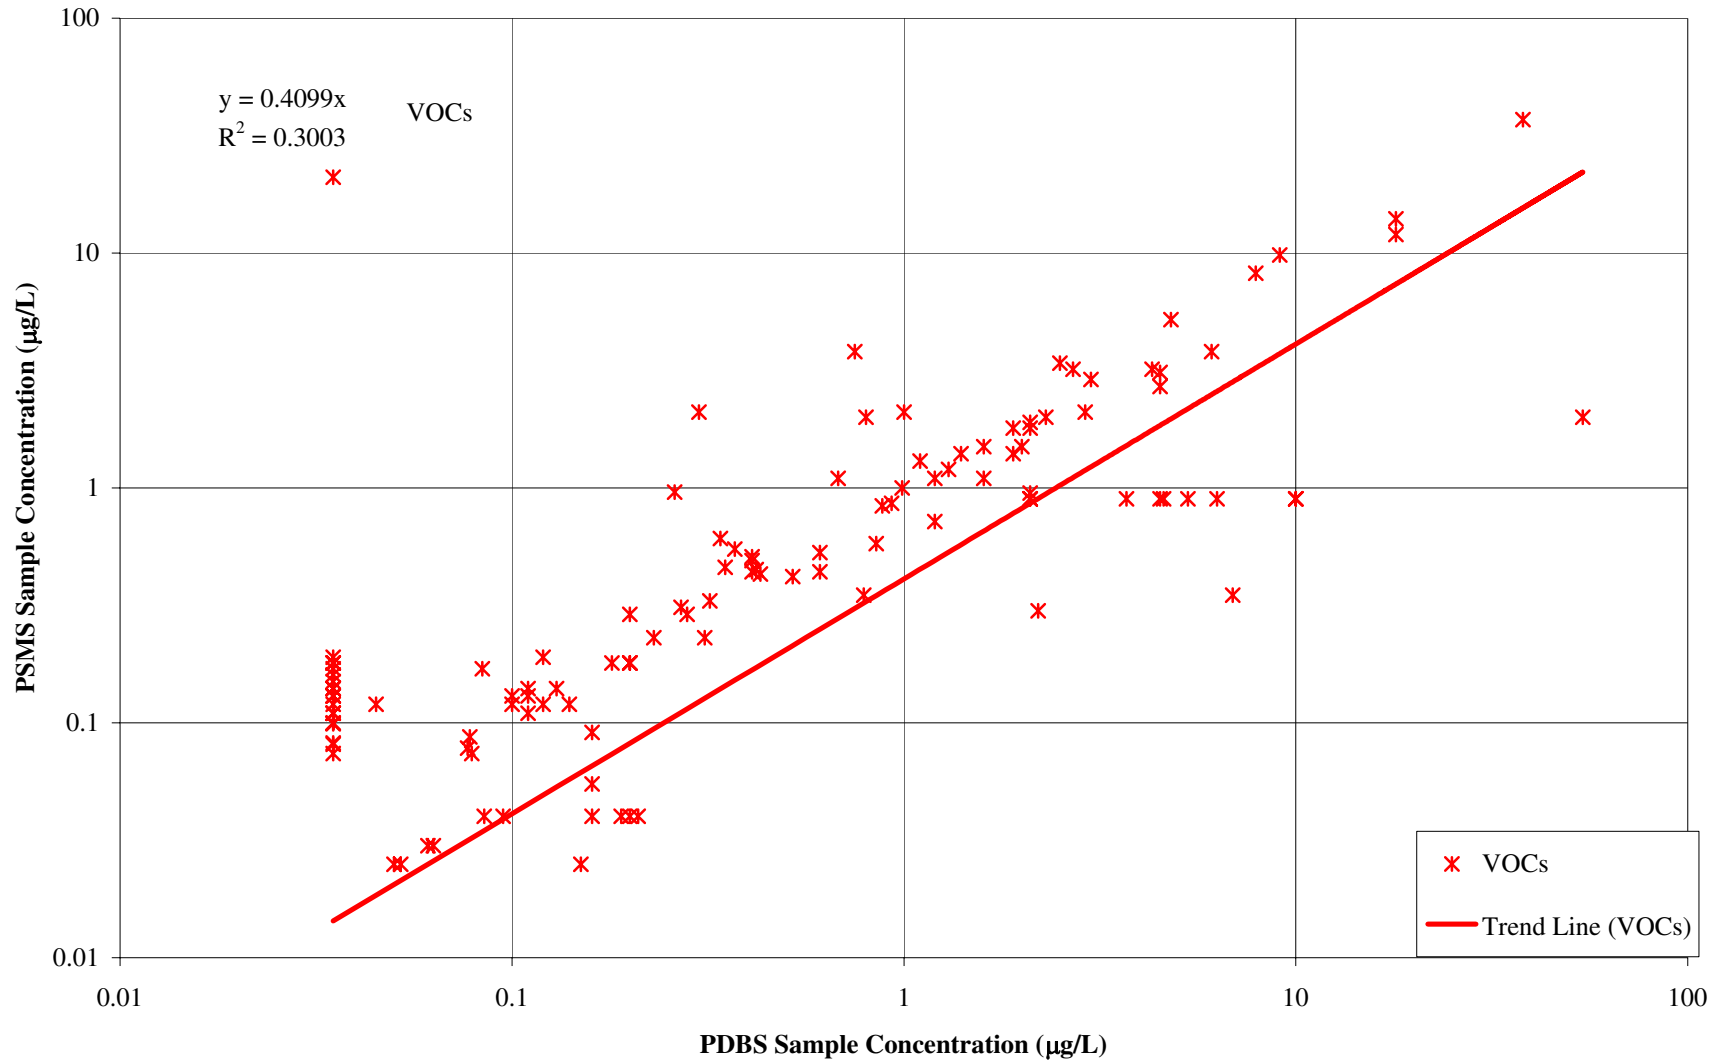


PDBS Versus RCS

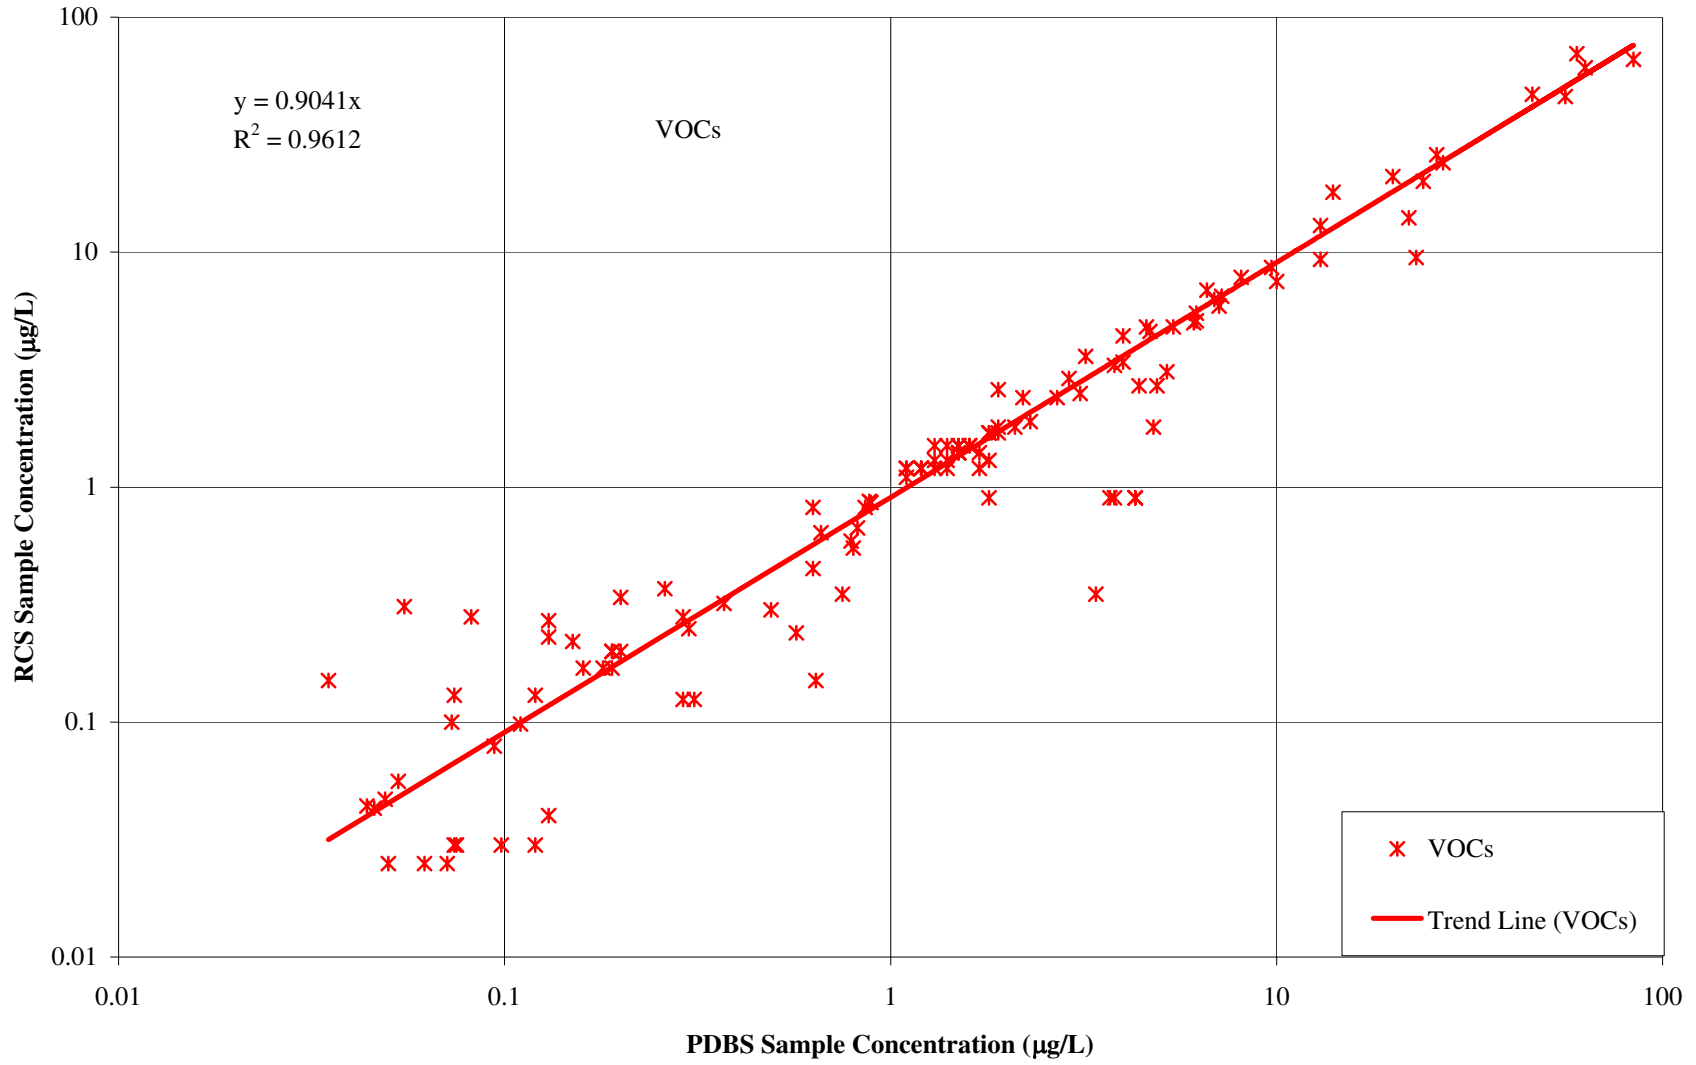


PDBS Versus RPPS

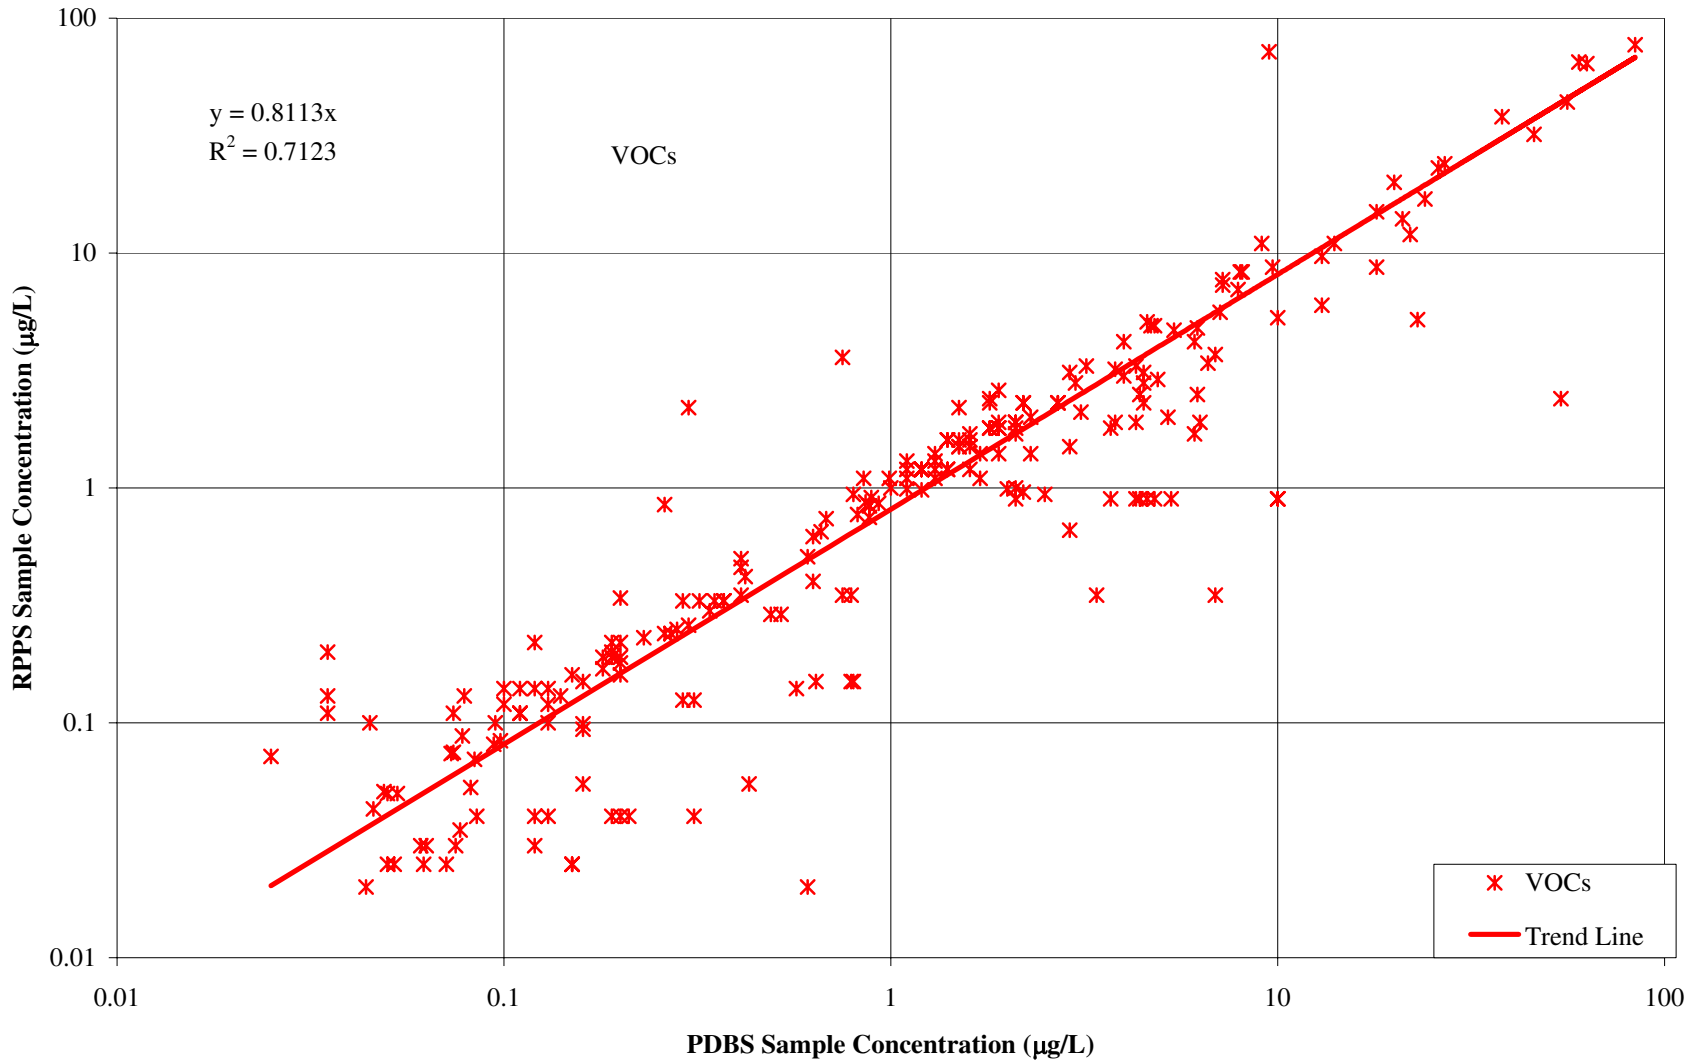


PDBS Versus Snap Sampler

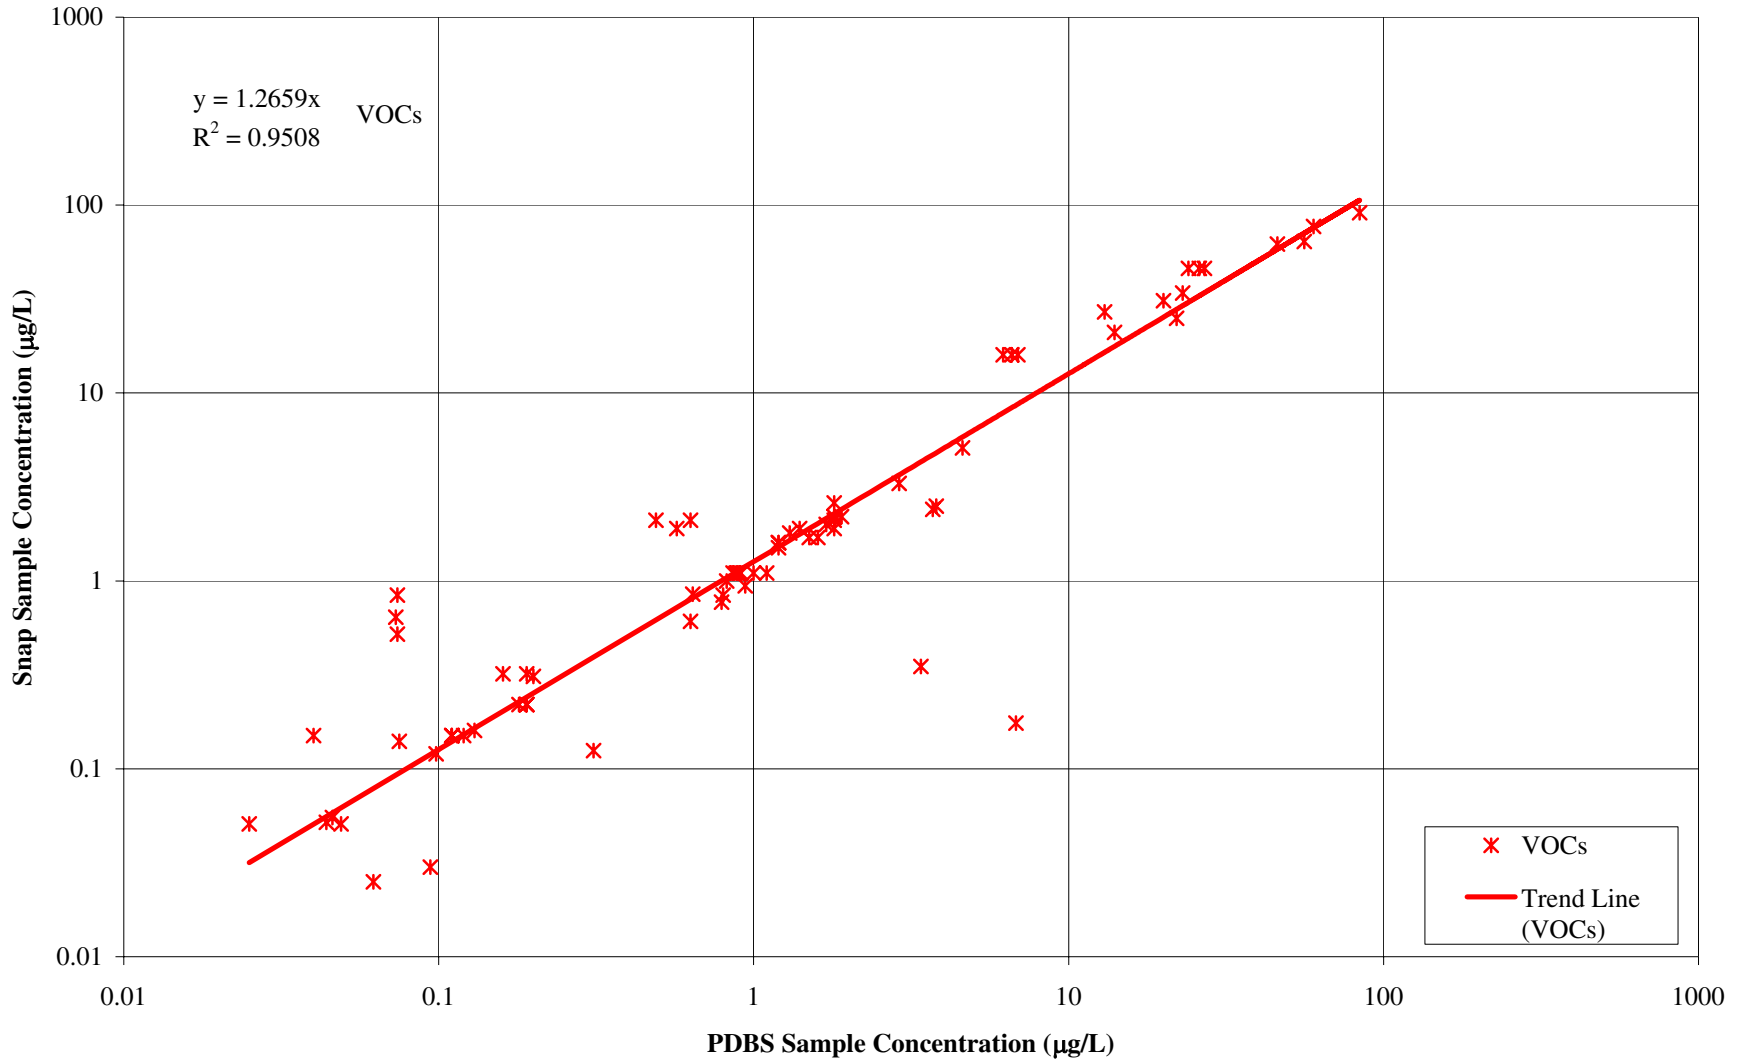


PSMS Versus RPPS

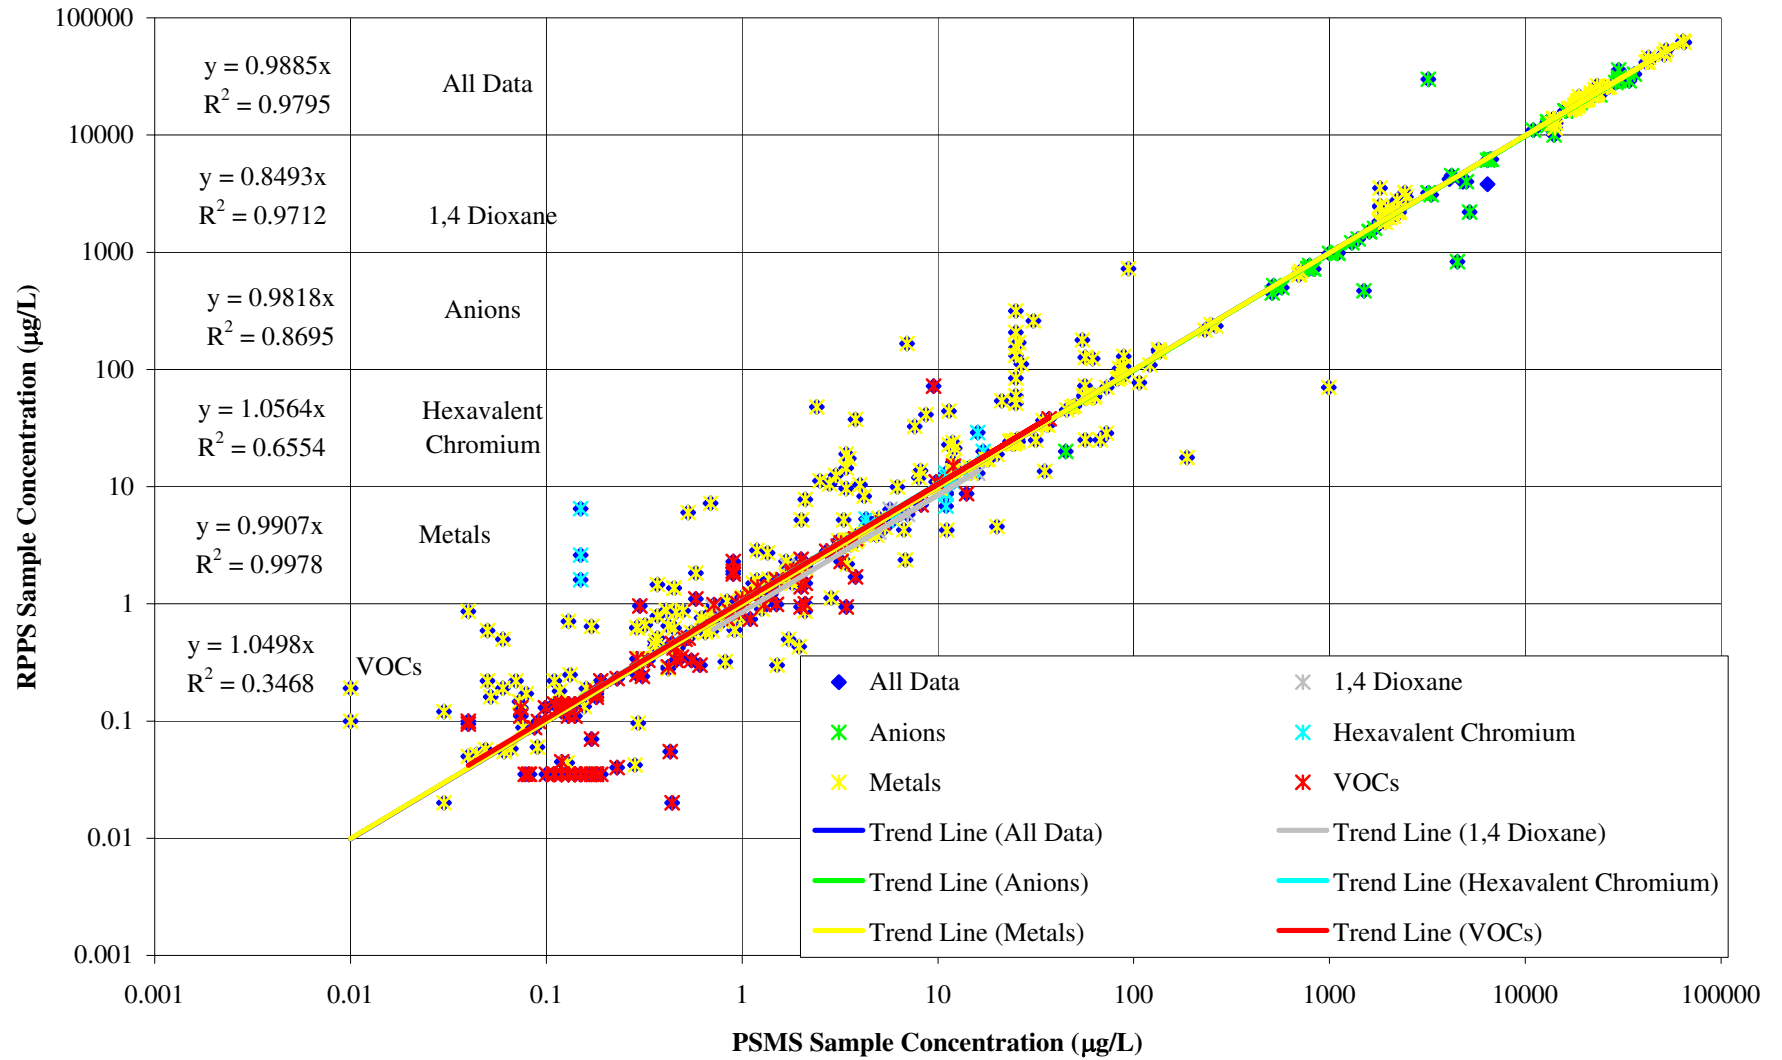


PSMS Versus RPPS

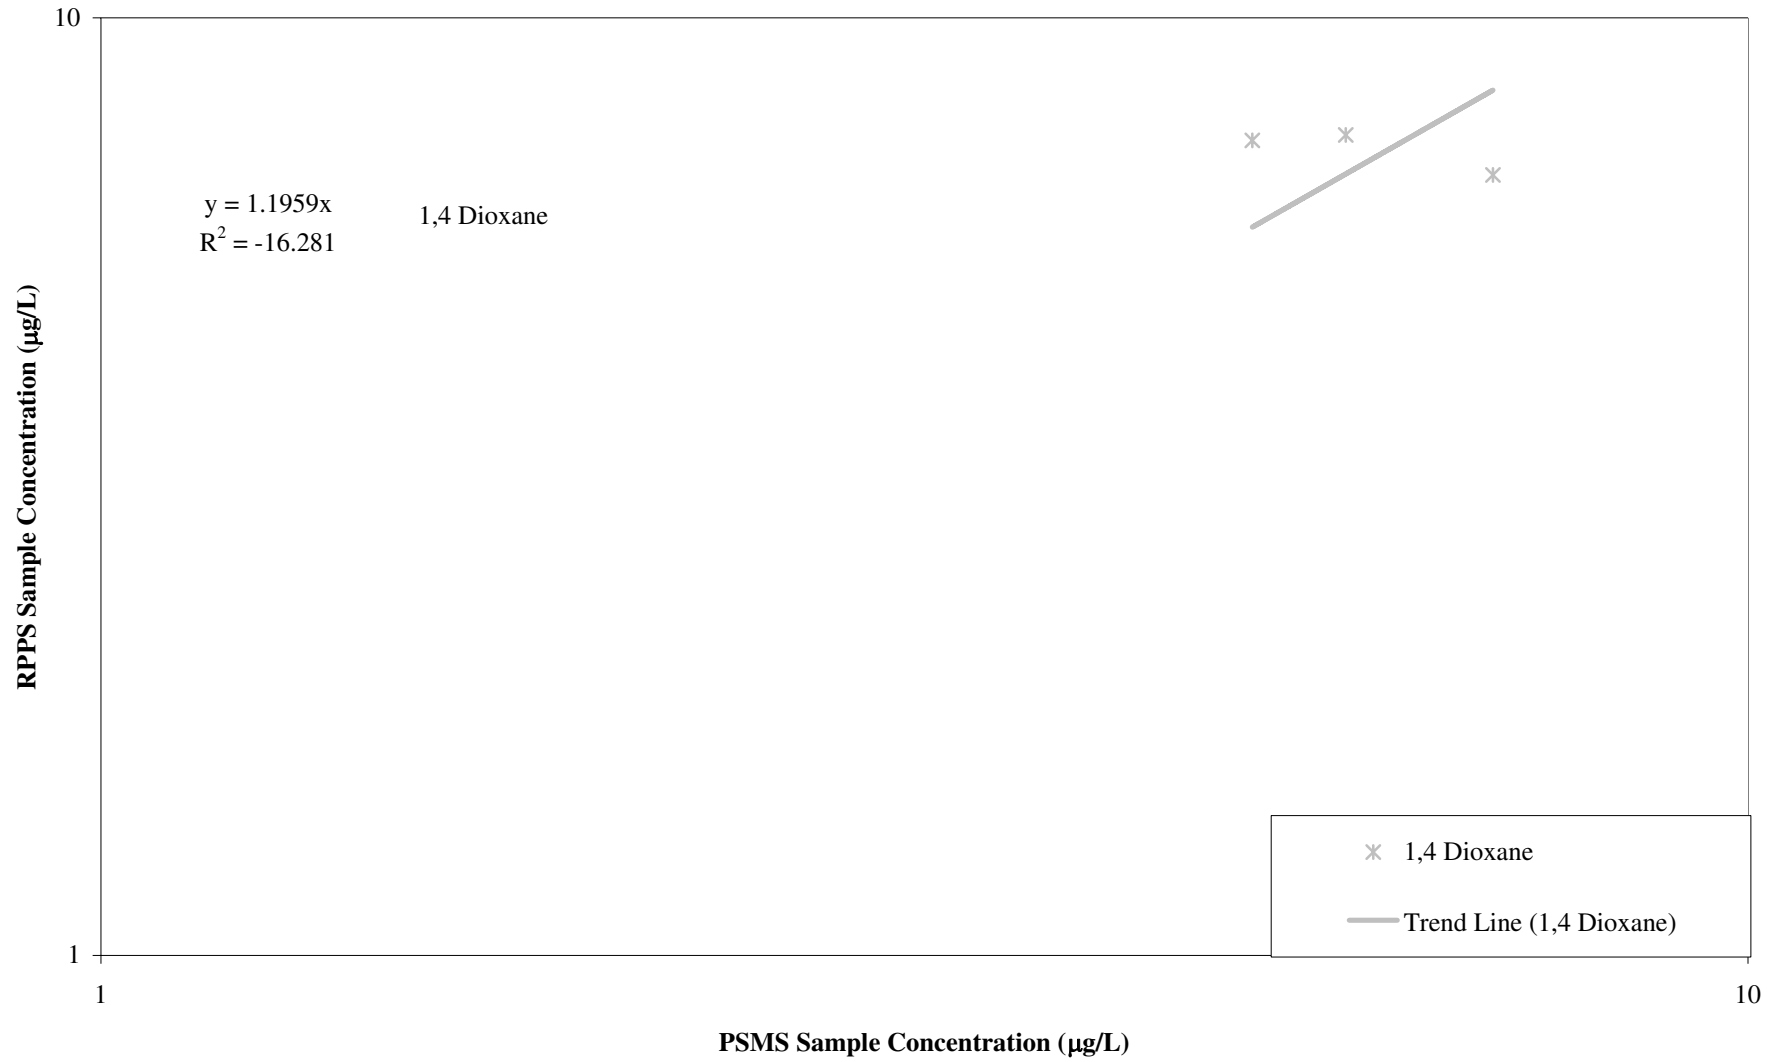

RCS Versus RPPS

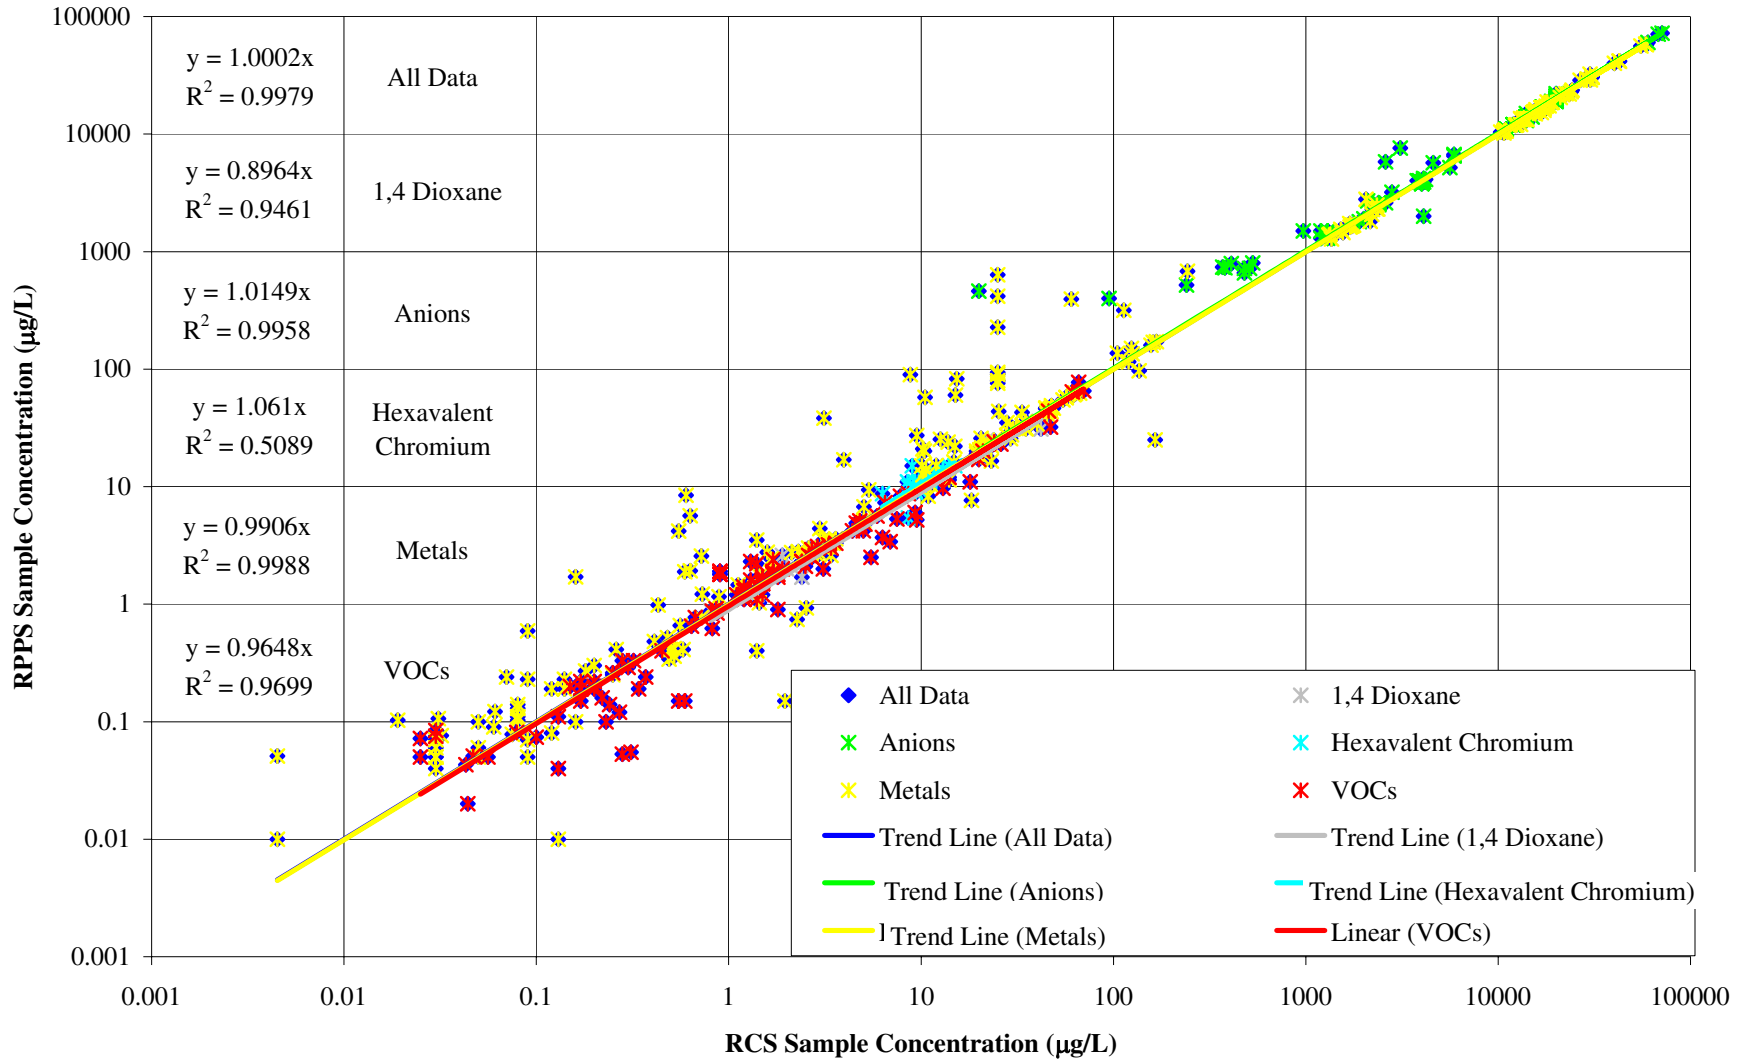

RCS Versus Snap Sampler

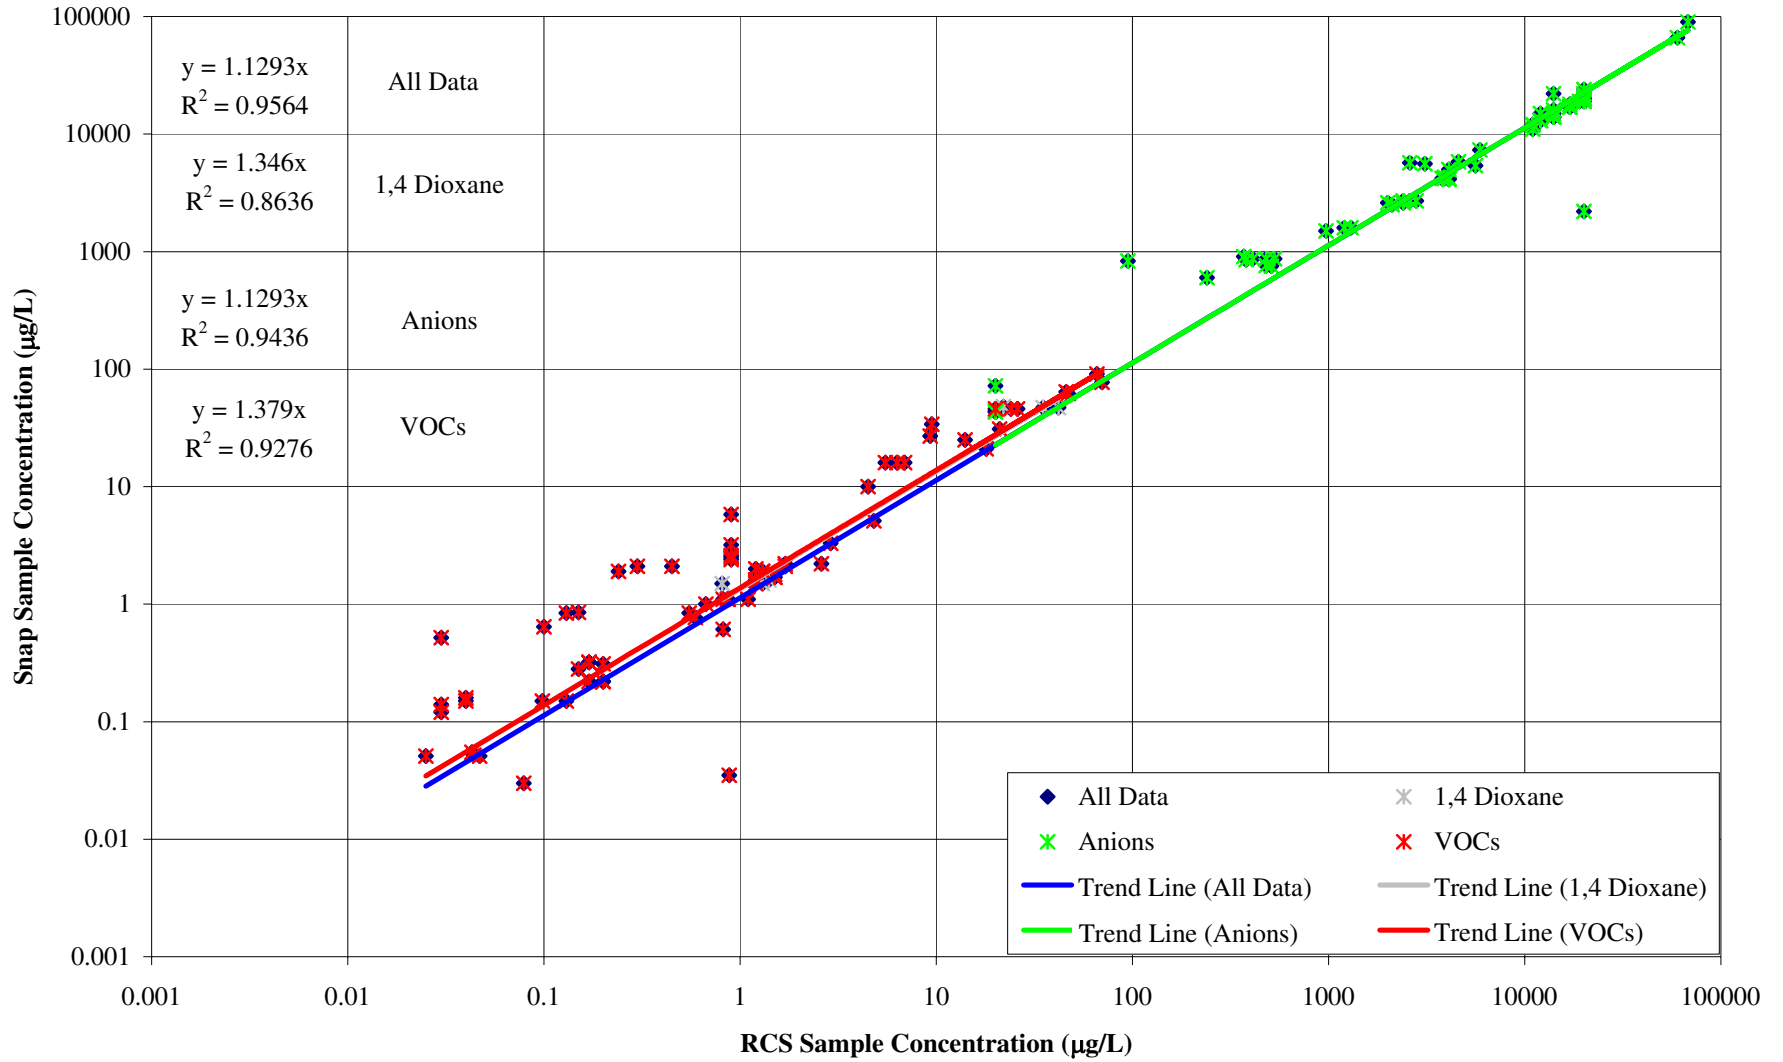

RPPS Versus Snap Sampler

